

The diagram illustrates the assembly of the 3000 Series 30" x 42" TV. It shows three main components: the TV set (labeled "A"), the backside picture frame (labeled "B"), and the picture frame assembly (labeled "C"). The TV set is shown with its dimensions: 30" (762 mm) wide and 42" (1067 mm) high. The backside picture frame is shown with its dimensions: 3" (76 mm) wide and 42" (1067 mm) high. The picture frame assembly is shown with its dimensions: 3" (76 mm) wide and 42" (1067 mm) high. The diagram also shows the 90° angle between the backside picture frame and the picture frame assembly, and the 3" (76 mm) wide picture frame. A single lock seam is indicated on the picture frame assembly.

B