


TERMINATION BAR FASCIA

ONE SLOT VERSION


INSTALLATION INSTRUCTIONS

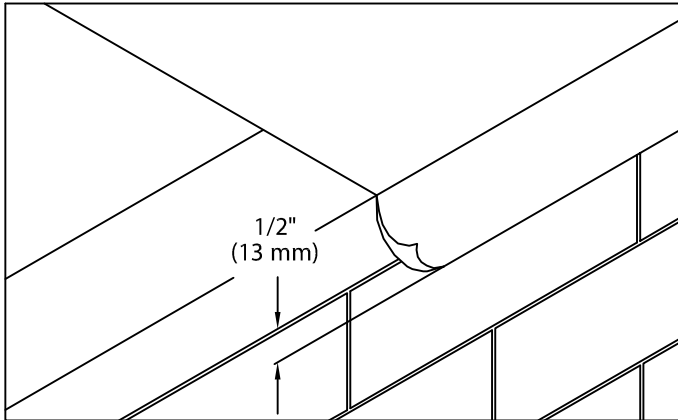

1. Roofing Membrane


Position membrane over the roof edge and down outside face of wall, covering treated wood nailer(s) completely. Allow 1/2" (13 mm) excess membrane.

IMPORTANT! Outside edge of treated wood nailer(s) (minimum 2 x 4) shall be aligned flush with or extend slightly past outermost edge of wall.

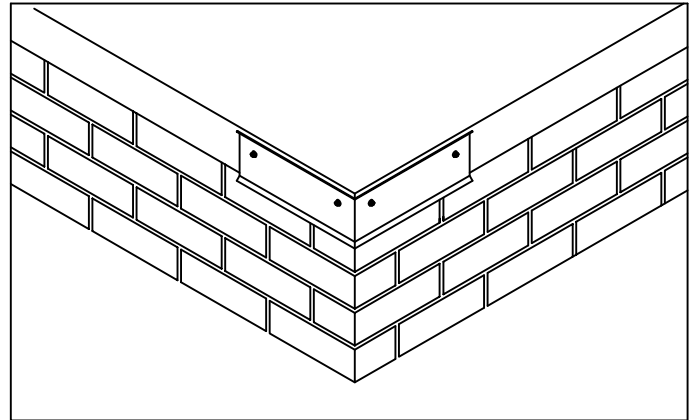


2. Formed Bar Miter Installation

Fold roofing membrane at corners and install miters with appropriate fasteners.

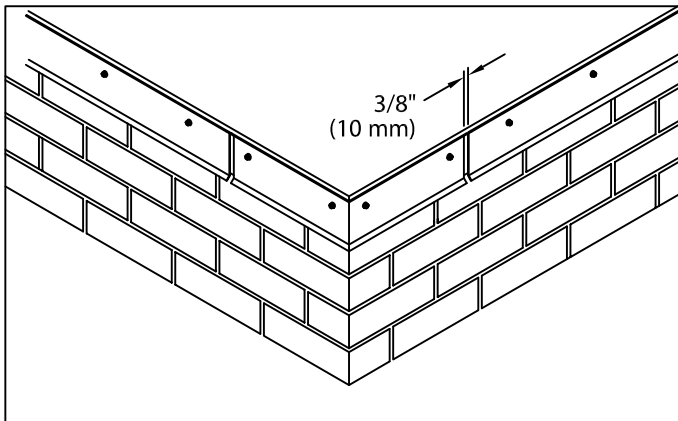

3. Formed Bar Installation

Install 12'-0" (3.65 m) sections of formed bar from right to left, (as seen from roof top) spacing formed bar joints 3/8" (10 mm). Fasten bar 12" (305 mm) O.C. through slots with appropriate fasteners. Field cut sections as necessary.

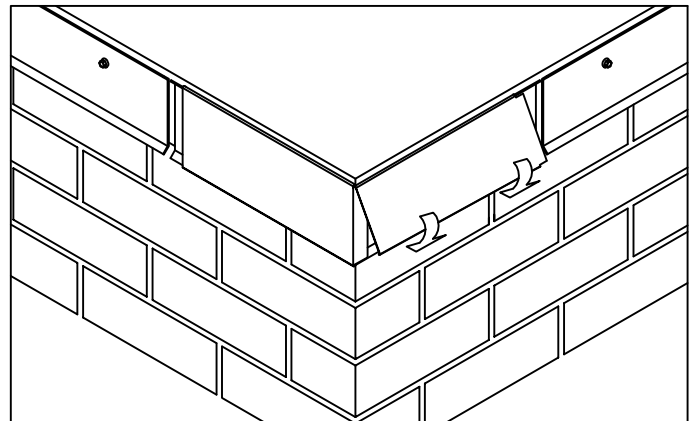


4. Fascia Miter Covers

Install 2-piece fascia corner covers first by hooking top edge of fascia corner cover with 90° (degree) tab and rotating down. Press the bottom edge of the bar until it snaps into place. Followed by fascia corner cover without the tab.

TERMINATION BAR FASCIA


ONE SLOT VERSION

INSTALLATION INSTRUCTIONS

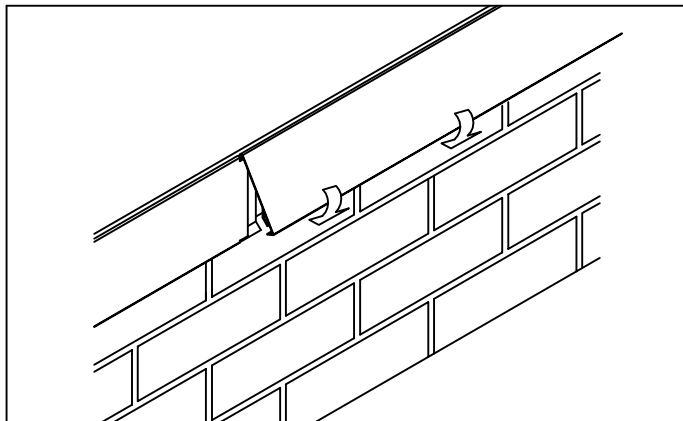

5. Fascia Covers


Install 12'-0" (3.65 m) covers by hooking the top edge of the cover onto the top of the bar and rotate down. Press the bottom edge into the bar until it snaps into place. Continue with each section, while lapping each section 1" (25 mm) onto the next.

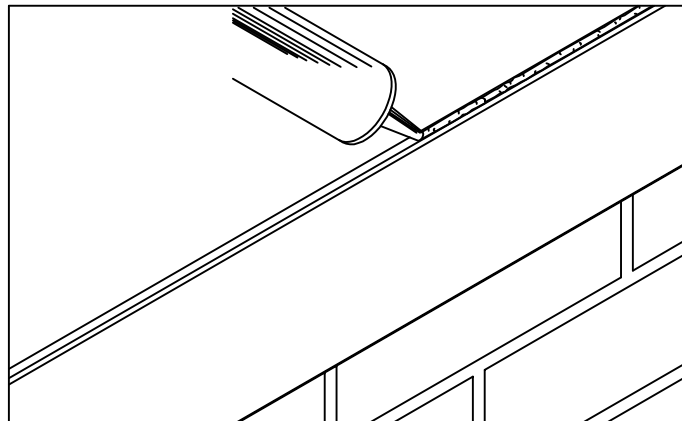

6. Caulk

Apply caulk (by others) along entire length of fascia between the wall and the fascia.


IMPORTANT! Be sure to remove protective plastic film prior to installing each fascia section.

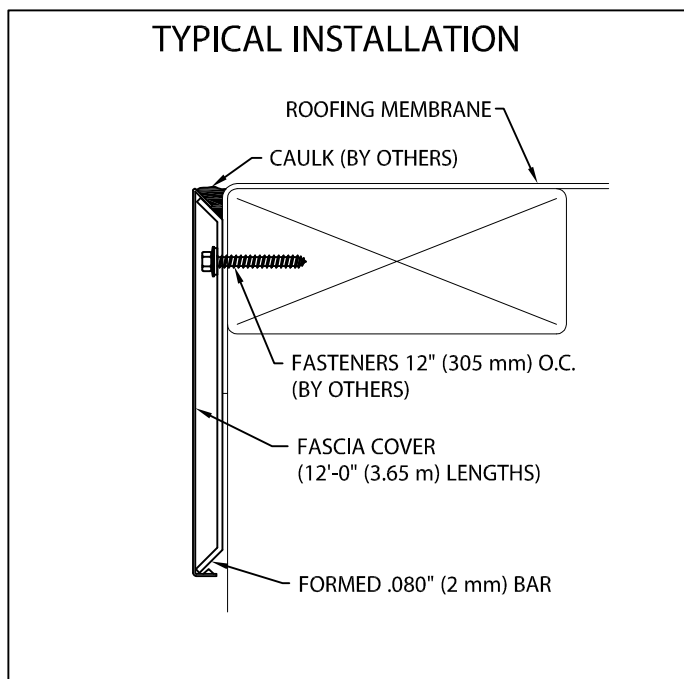

TERMINATION BAR FASCIA

ONE SLOT VERSION


INSTRUCCIONES DE INSTALACIÓN

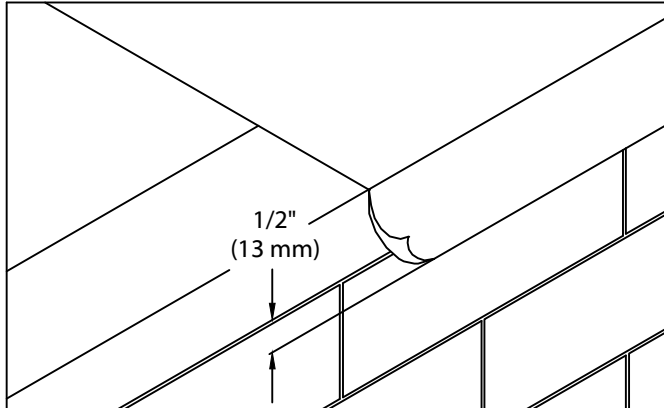

1. Membrana de techo


Coloque la membrana sobre el borde del techo y la cara exterior de la pared, cubriendo la clavadora de madera tratada completamente. Deje 1/2" (13 mm) de membrana excedente.

¡IMPORTANTE! El borde exterior de la clavadora de madera tratada (2 x 4 mínimo) debe alinearse al ras con el borde de la pared o sobresalir poquito.

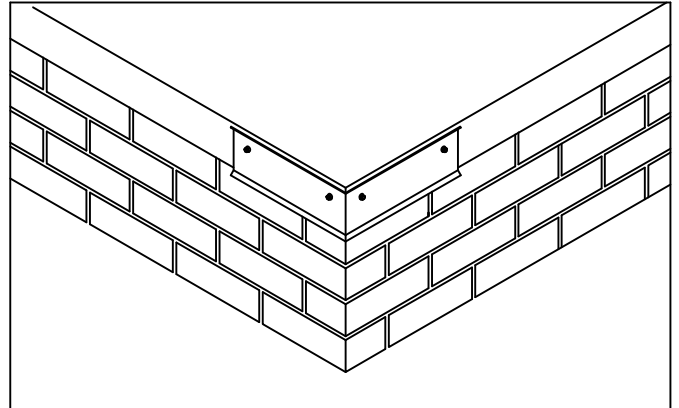


2. Instalación de inglete de barra formada

Doble la membrana de techo en las esquinas e instale ingletes con los tornillos adecuados.

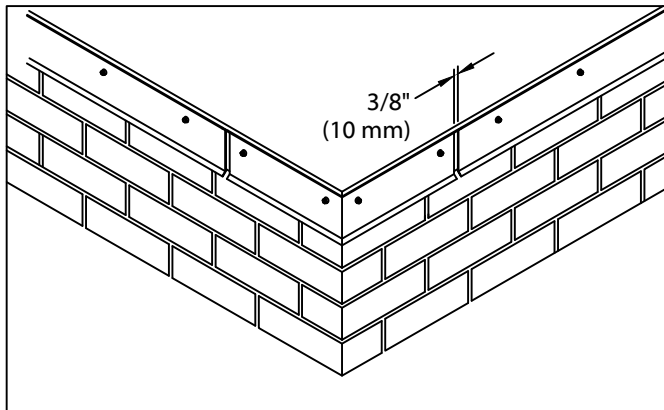

3. Instalación de barra formada

Instale las secciones de 12'-0" (3.65 m) de la barra formada de derecha a izquierda, (visto desde arriba del techo) espaciando las uniones de barra formada 3/8" (10 mm). Atornille la barra cada 12" (305 mm) a través de las ranuras con los tornillos apropiados. Corte secciones en campo como sea necesario.

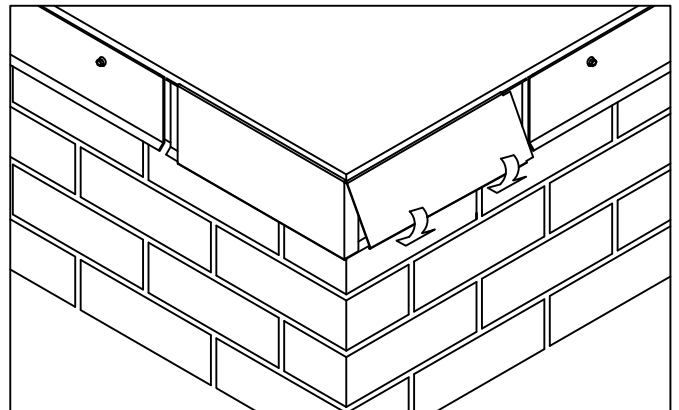


4. Cubiertas de inglete de fachada de borde

Instale cubiertas de esquina de la fachada de borde de 2 piezas, primero enganche el borde superior de la cubierta de esquina de la fachada de borde con la orejeta de 90° (grados) y girando hacia abajo. Presione el borde inferior de la barra hasta que abroche en su lugar. Seguido por la cubierta de esquina de fachada de borde sin la orejeta.

TERMINATION BAR FASCIA


ONE SLOT VERSION

INSTRUCCIONES DE INSTALACIÓN

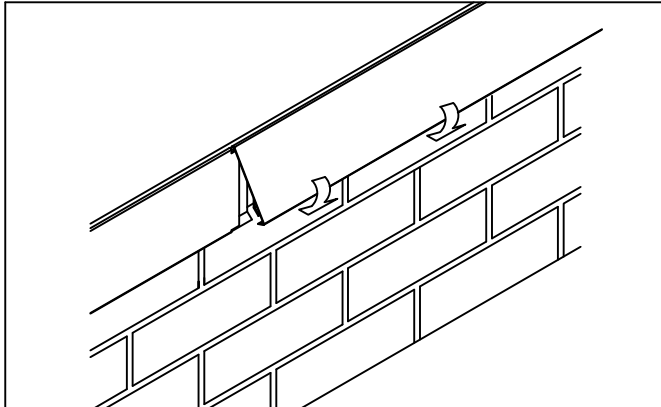

5. Cubiertas de fachada de borde

Instale cubiertas de 12'-0" (3.65 m) engancho el borde superior de la cubierta sobre la parte superior de la barra y girando hacia abajo. Presione el borde inferior en la barra hasta que se abra en su lugar. Continúe con cada sección, mientras solapa cada sección 1" (25 mm) sobre la siguiente.

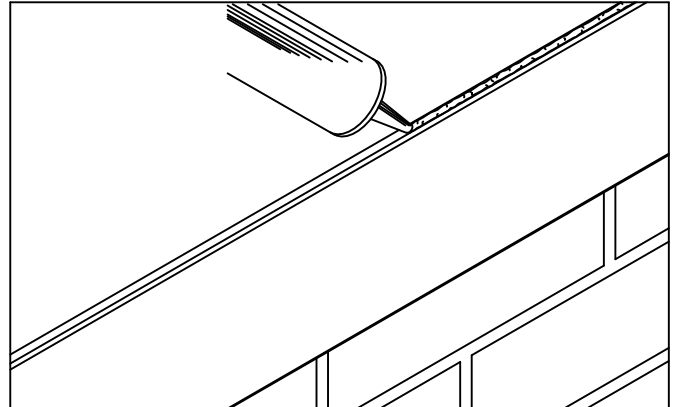

6. Calafateado

Aplique calafateado (por tercetos) a lo largo de la longitud entera de la fachada de borde, entre la pared y la fachada de borde.

¡IMPORTANTE! Asegúrese de quitar el plástico protector antes de instalar cada sección de fachada de borde.

