
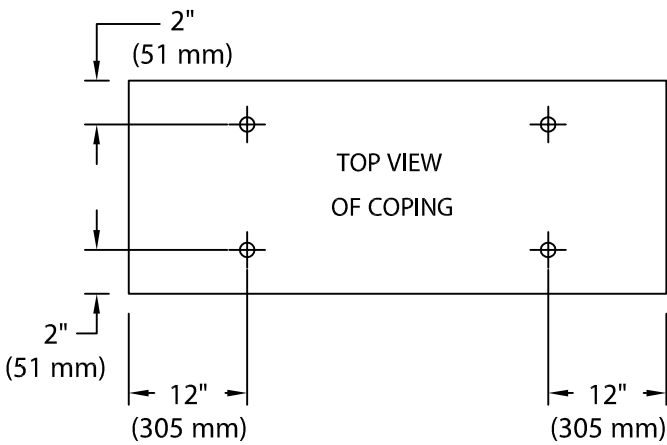


# ARCHED COPING


## INSTALLATION INSTRUCTIONS

NOTE: INSTALL ENDCAPS FIRST.

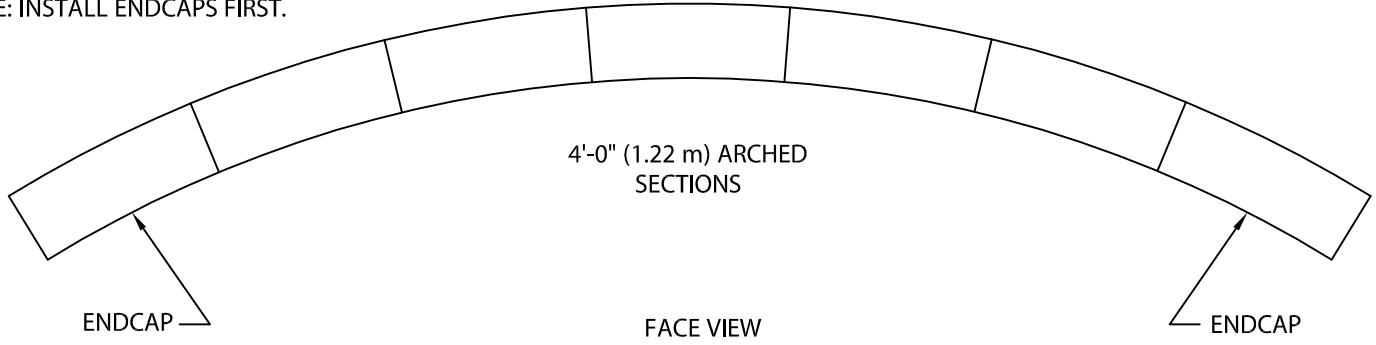


### STEP 1 - End Caps

Install endcaps by first inserting splice plate under endcap with sealant. Fasten through top of endcap as shown with provided fasteners.

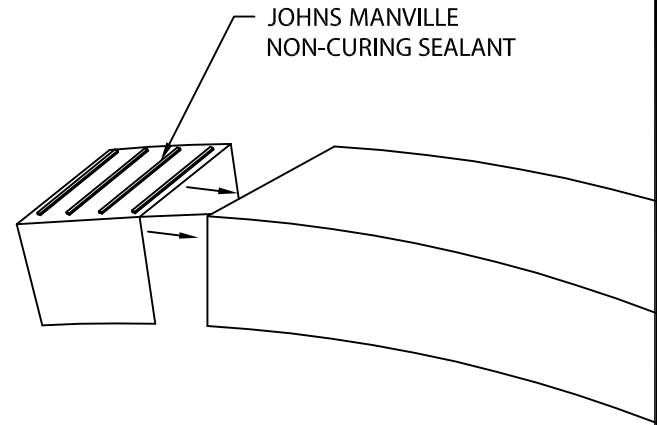


### STEP 2 - Splice Plates

Install coping by first inserting splice plate under coping as shown with Johns Manville non-curing sealant.

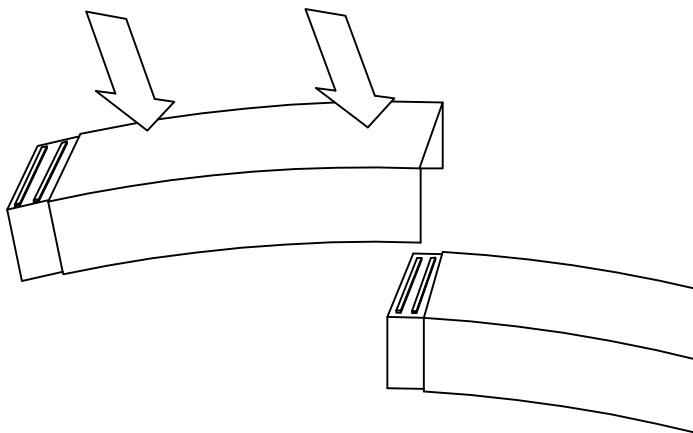

### STEP 3 - Coping Cover

Place coping into position allowing 3/8" (10 mm) space at splice joint. Fasten through top of coping as shown in step #1

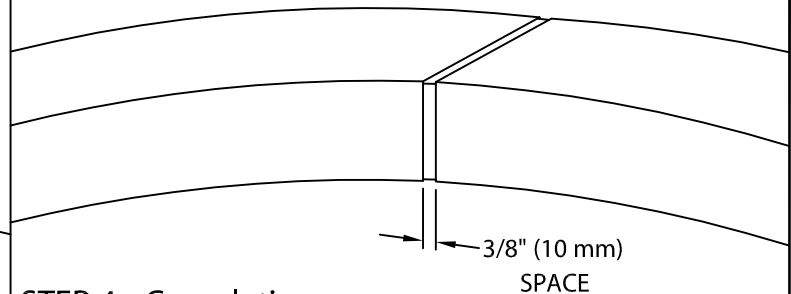

### STEP 4 - Completion

Continue installing coping with a 3/8" (10 mm) space at splice joints to allow for thermal expansion. Field cut where necessary using a fine tooth hacksaw or snips. Fasten through top of coping as shown in step 1.

NOTE: REMOVE PROTECTIVE FILM IMMEDIATELY.