


PRESTO-LOCK / TITE EXTENDER

SPLICE PLATE VERSION

INSTALLATION INSTRUCTIONS

NOTE: INSTALL MITERS FIRST.

STEP ① POSITION 12'-0" (3.65 m) CONTINUOUS CLEAT SECTIONS THEN FASTEN 12" (305 mm) O.C. AS SHOWN WITH APPROPRIATE FASTENERS. LAP CONTINUOUS CLEAT 1" AT JOINTS.

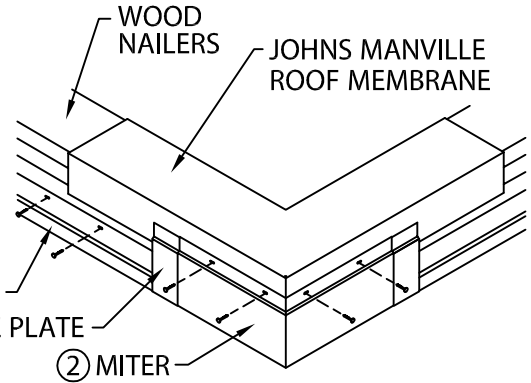


① CONTINUOUS CLEAT
SPLICE PLATE

② MITER


STEP ② INSTALL EXTENDER MITERS FIRST. INSERT ONE SPLICE PLATE UNDER EACH END OF MITER AS SHOWN. FASTEN WITH APPROPRIATE FASTENERS FOR SUBSTRATE.

STEP ③ INSERT ONE SPLICE PLATE UNDER LEFT END OF 12'-0" LONG EXTENDER SECTION AS SHOWN.


STEP ④ INSTALL 12'-0" EXTENDER SECTIONS. EXTENDER SHALL BE INSTALLED FROM RIGHT TO LEFT AS SEEN FROM ROOFTOP. HOOK DRIP EDGE OF EACH EXTENDER SECTION ONTO CONTINUOUS CLEAT. FASTEN WITH APPROPRIATE FASTENERS.

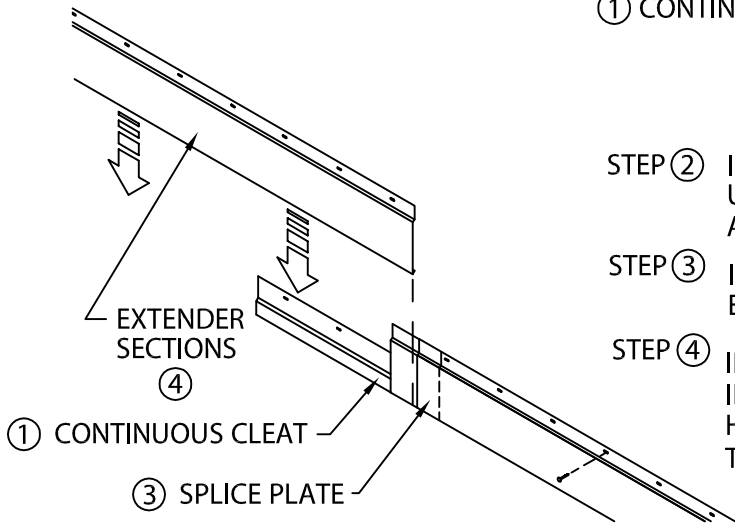

STYLE I INSTALLATION

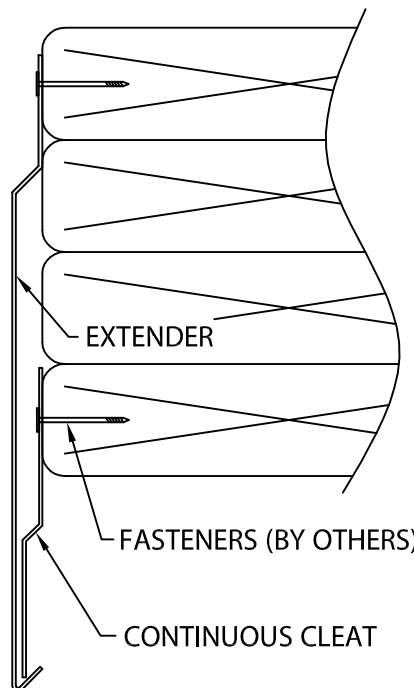

STYLE II INSTALLATION

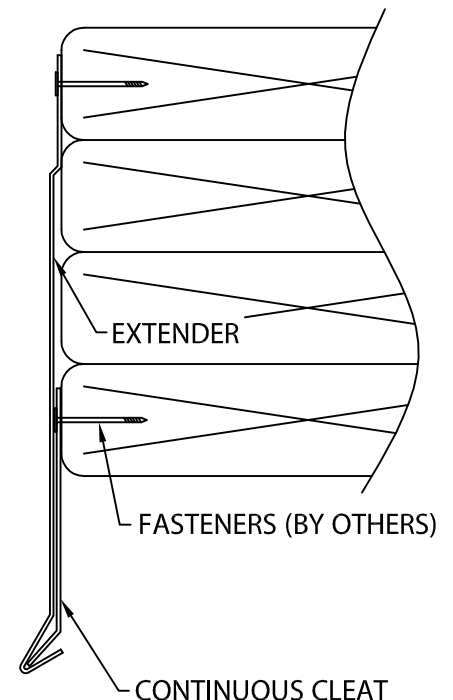

FASTEN EXTENDER WITH APPROPRIATE FASTENERS

⑤ 3/8" (10 mm) SPACE AT EACH JOINT

STEP ⑤ CONTINUE BY INSTALLING EXTENDER SECTIONS ALLOWING A 3/8" (10 mm) SPACE BETWEEN SECTIONS AS SHOWN. FIELD CUT AS NECESSARY.

CAUTION: REMOVE PROTECTIVE FILM IMMEDIATELY AFTER INSTALLATION. INSTALLERS SHALL WEAR PROTECTIVE EYEWEAR TO PREVENT INJURY.