

# 2 PC COUNTERFLASHING


REGLET VERSION

## INSTALLATION INSTRUCTIONS

### STEP 1 - REGLET RECEIVER




INSTALL REGLET RECEIVER INTO 1" DEEP SAWCUT OR MORTAR JOINT. SAWCUT SHALL BE CUT TRUE AND LEVEL A MINIMUM OF 7" ABOVE THE HIGH POINT OF THE CANT STRIP (IF USED). INSTALL FROM RIGHT TO LEFT. LAP ENDS OF REGLET 3" AT FACTORY NOTCHED END.

NOTE: REMOVE PROTECTIVE FILM IMMEDIATELY.

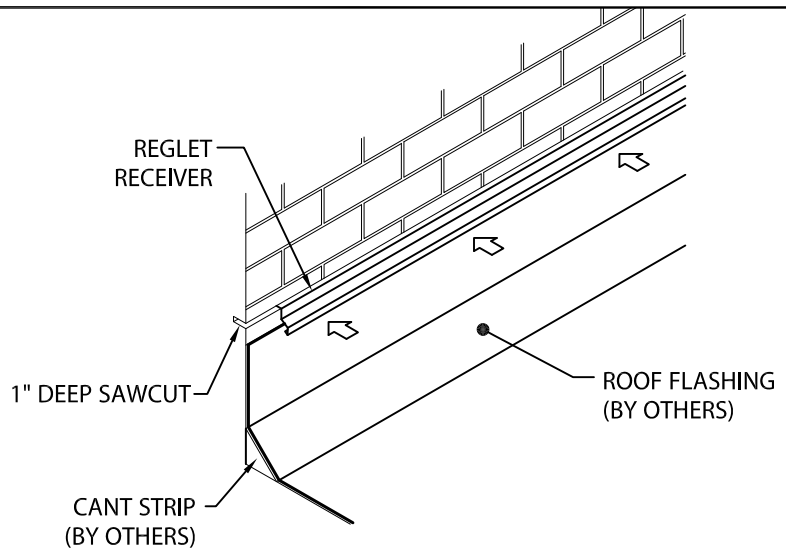



### STEP 2 - COUNTERFLASHING

PRIOR TO INSTALLING COUNTERFLASHING, REMOVE PROTECTIVE FILM. HOOK COUNTERFLASHING ONTO RECEIVER AS SHOWN IN FIG. A. ROTATE DOWNWARD INTO PLACE (FIG. B). STAGGER REGLET RECEIVER AND COUNTERFLASHING JOINTS ACCORDINGLY.

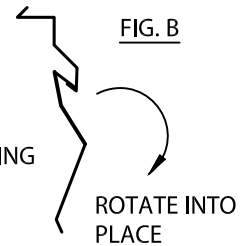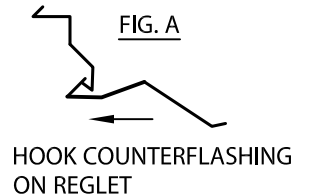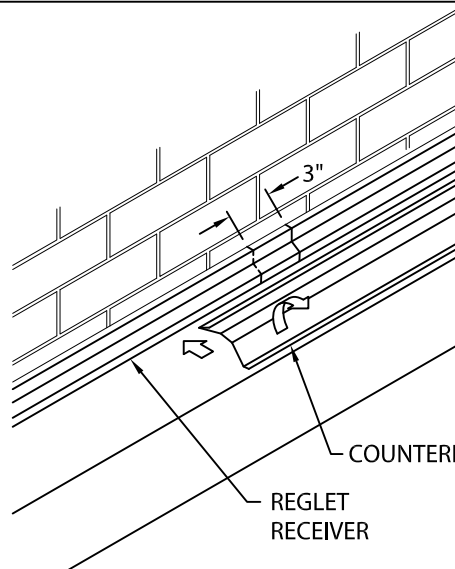

### STEP 3 - COUNTERFLASHING

REMOVE PROTECTIVE FILM. HOOK COUNTERFLASHING ONTO RECEIVER AS SHOWN IN FIG. C. SLIDE COUNTERFLASHING 3" AT LAP JOINT OVER PREVIOUSLY INSTALLED PIECE. ROTATE DOWNWARD INTO PLACE AS SHOWN IN STEP 2.

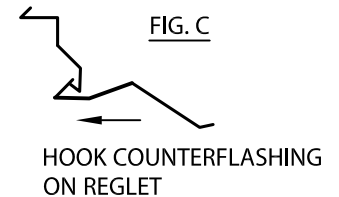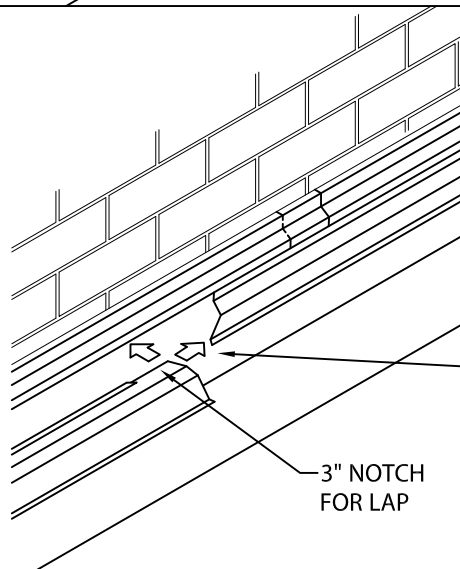

AFTER HOOKING, SLIDE COUNTERFLASHING OVER INSTALLED PIECE 3" AT LAP JOINT AND ROTATE INTO PLACE



Customer Service  
800-558-2162

DATE: 02/17/17  
DRN BY: JAB  
CKD BY: SAK

SHT.# 1 OF 2  
DWG# 18115-24537


B

# 2 PC COUNTERFLASHING

REGLET VERSION

## INSTALLATION INSTRUCTIONS

HIGH GRADE ARCHITECTURAL  
SEALANT ( BY OTHERS)

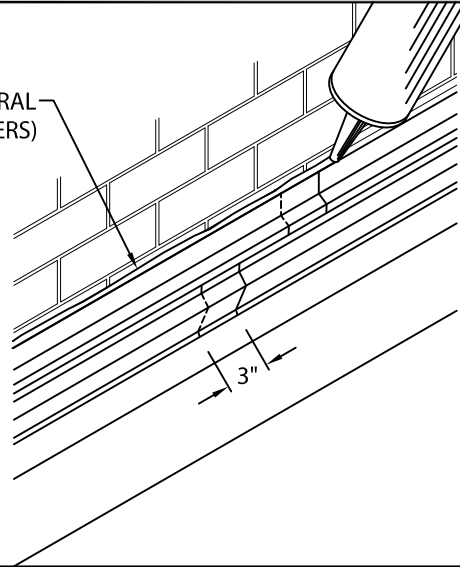

STEP 4 - COMPLETION  
APPLY A CONTINUOUS BEAD OF HIGH  
GRADE ARCHITECTURAL SEALANT IN  
CAULK CUP OF REGLET TO COMPLETE  
INSTALLATION.

## TYPICAL INSTALLATION

