


### 1. Roof Membrane

Position membrane over the roof edge and down outside face of wall, covering treated wood nailer(s) completely. Allow 1/2" (13 mm) excess membrane.


**IMPORTANT!** Outside edge of treated wood nailer(s) (minimum 2 x 4) shall be aligned flush with or extend slightly past outermost edge of wall.

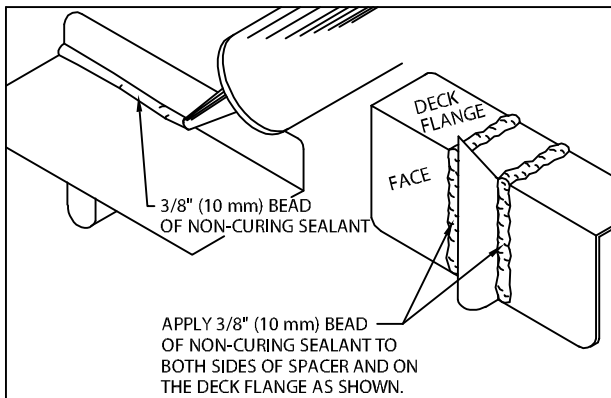

### 3. Anchor Bar Splice Plates


Apply Carlisle Water Cut-Off Mastic to each splice plate as shown and described in STEP 2.

**CAUTION!** Installers shall wear protective eyewear to prevent injury. Do not over-drive fasteners, as stripping can occur at high driver torque. Recommended driving tool: 600 - 800 rpm electric drill equipped with depth-sensing nosepiece to prevent over-driving and stripout. Do not use impact type tool.

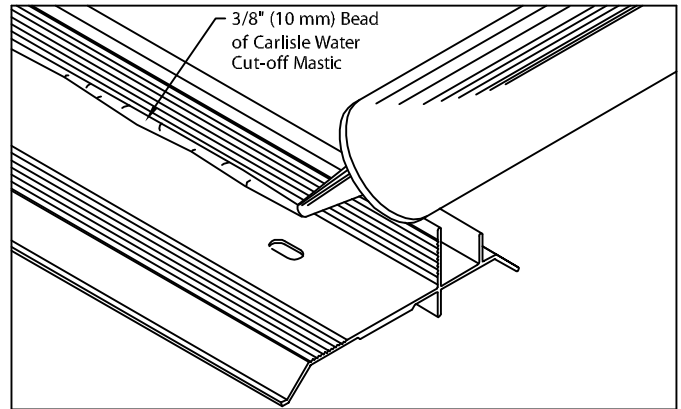


### 2. Miter & Scupper Anchor Bar (Preparation)

Lay miters and spillout scuppers on deck with outside face down. Be sure aluminum anchor bar is clean and free of dirt or dust. Apply a heavy 3/8" (10 mm) bead of Carlisle Water Cut-Off Mastic to the right angle intersection of the deck flange and back of anchor bar as shown. Application of sealant is required along the full length of each miter anchor bar.

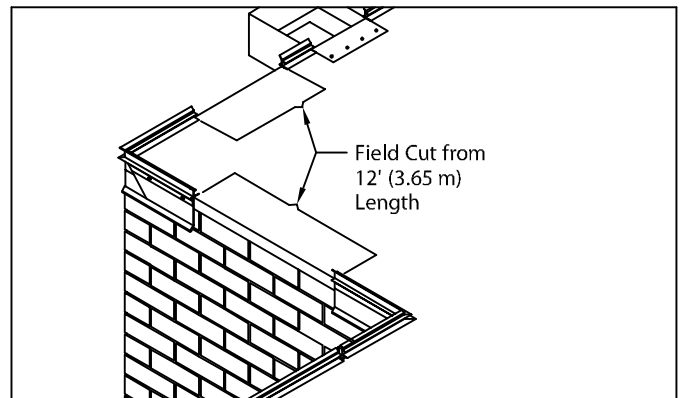


### 4. Miter Bar Installation

Fold roofing membrane at corners and install miters using 2" (51 mm) stainless steel fasteners and driver bit furnished by Carlisle. Fasten anchor bar corners to nailer with one splice plate under each end of corner. The sponge gasket must be snug to ends of anchor bar. Next locate and install spillouts and scuppers with Water Cut-Off Mastic, 2" (51 mm) fasteners and splice plates.

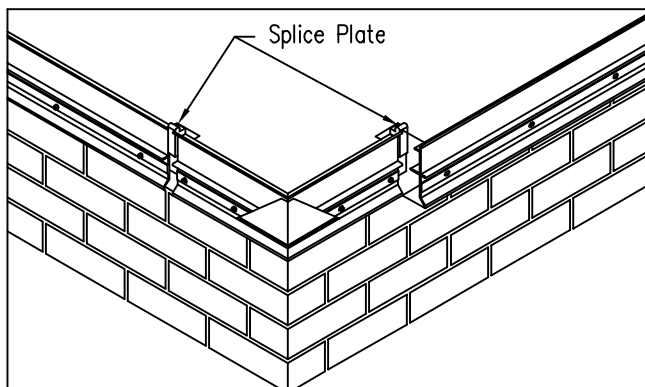

## 5. Anchor Bar (Installation)


Position 12' (3.65 m) sections of anchor bar with applied Water Cut-off mastic, as shown in steps 2 & 3, overlapping splice plate and butting snugly into gasket. Allow 1/2" (13 mm) space between anchor bars. Install splice plate at other end of 12' (3.65 m) bar. Fasten anchor bar 12" (305 mm) O.C. through slots using the 2" (51 mm) stainless steel fasteners provided. Field cut sections as necessary.

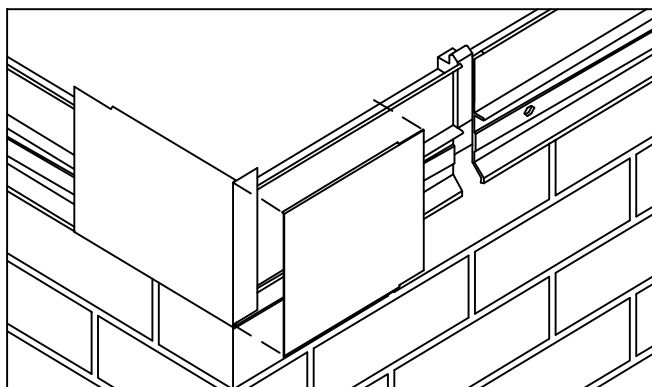

## 6. Fascia Miter Covers

Install 2-piece "snap-on" fascia miter covers first by snapping on fascia miter cover with 90° (degree) tab, followed by fascia miter cover without the tab. Simply position the cover atop bar and with palm of hand apply slight pressure downward until engaged to anchor bar.

**IMPORTANT!** Be sure to remove protective plastic film prior to installing each fascia section.

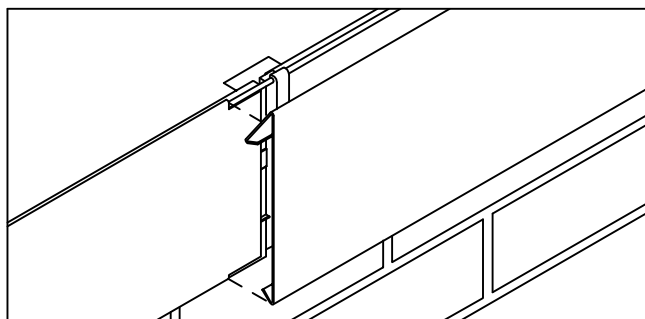

## 7. Fascia Covers

Position 12' (3.65 m) fascia covers on top of anchor bar and overlap preceding cover approximately 1" (25 mm) at notches provided. Fascia covers shall be installed from right to left as seen from rooftop. With fascia covers in correct position atop anchor bar, simply snap each section onto anchor bar by applying downward pressure with palm of the hand until the fascia cover is fully engaged along the entire length. Continue to install fascia covers, field cutting where necessary using a fine tooth hacksaw.

