


# FASCIA EXTENDER

SPLICE PLATE VERSION

## INSTALLATION INSTRUCTIONS


NOTE : INSTALL MITERS FIRST.

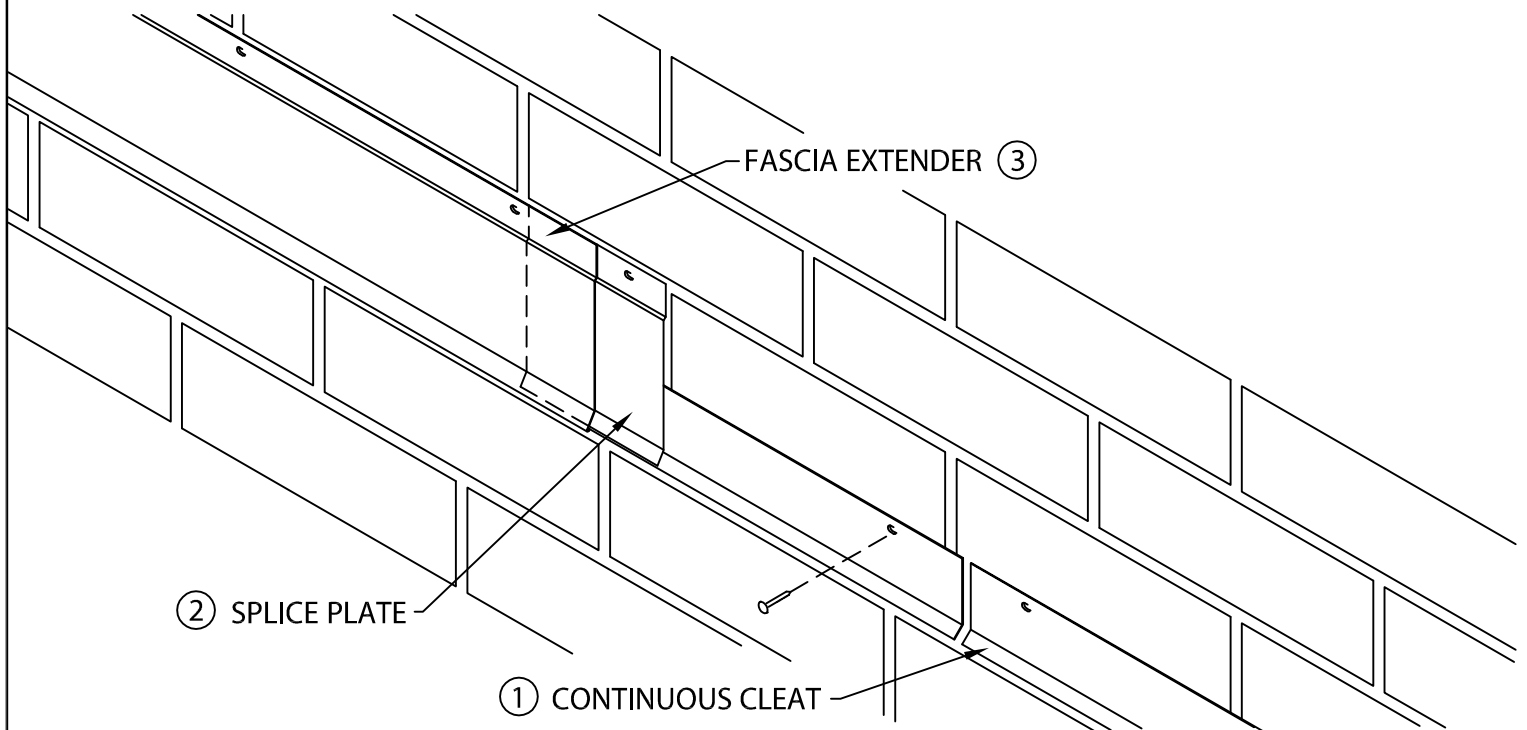


STEP ① - CAREFULLY POSITION AND FASTEN CONTINUOUS CLEAT 12" (305 mm) O.C. AS SHOWN WITH APPROPRIATE FASTENERS. CLEAT SHALL BE INSTALLED TRUE AND LEVEL.

STEP ② - LOCATE AND FASTEN 3 1/2" (89 mm) WIDE SPLICE PLATES AT EACH JOINT.

STEP ③ - HOOK DRIP EDGE OF EACH FASCIA EXTENDER ONTO CONTINUOUS CLEAT, AND FASTEN WITH APPROPRIATE FASTENERS AT 12" (305 mm) O.C.

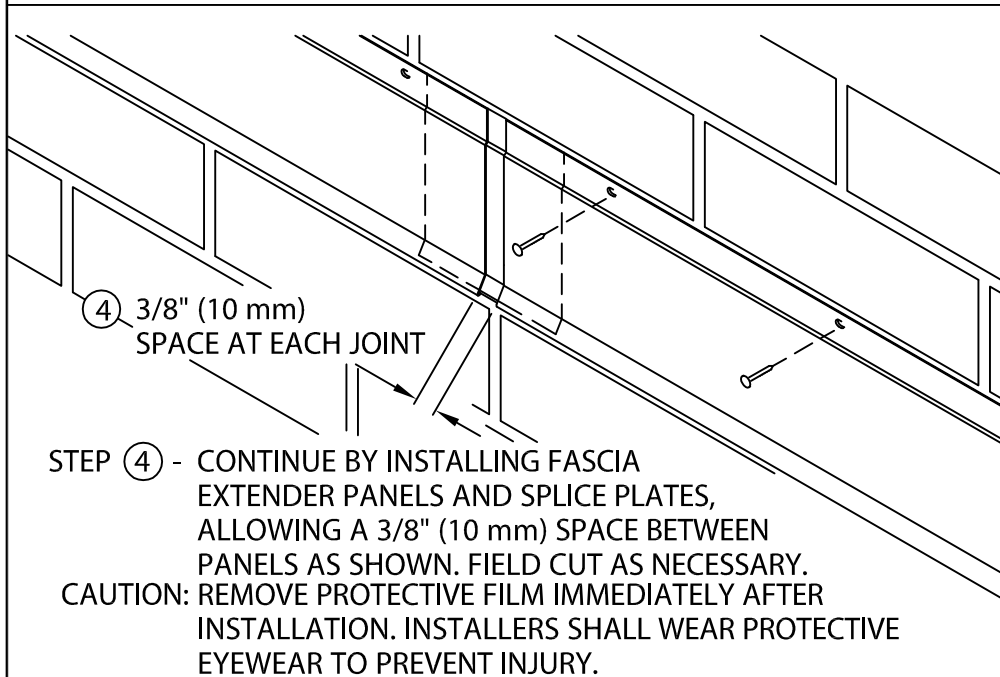

TYPICAL INSTALLATION  
(Substrate may vary per job conditions.)

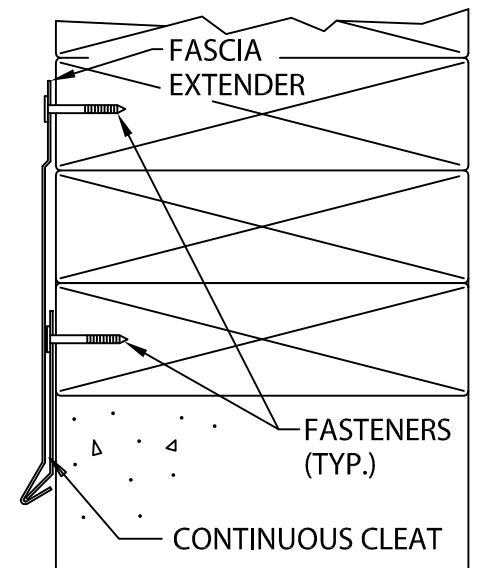

ROOFING SYSTEMS

P: 800-621-ROOF

DATE: 08/18/08

DRN BY: JJC

CKD BY: SAK

SHT.# \_\_\_\_ OF \_\_\_\_

DWG# 12114-3008

B