
ELEVATE GOLD COPING TAPERED VERSION - 4'-0" O.C.

INSTALLATION INSTRUCTIONS

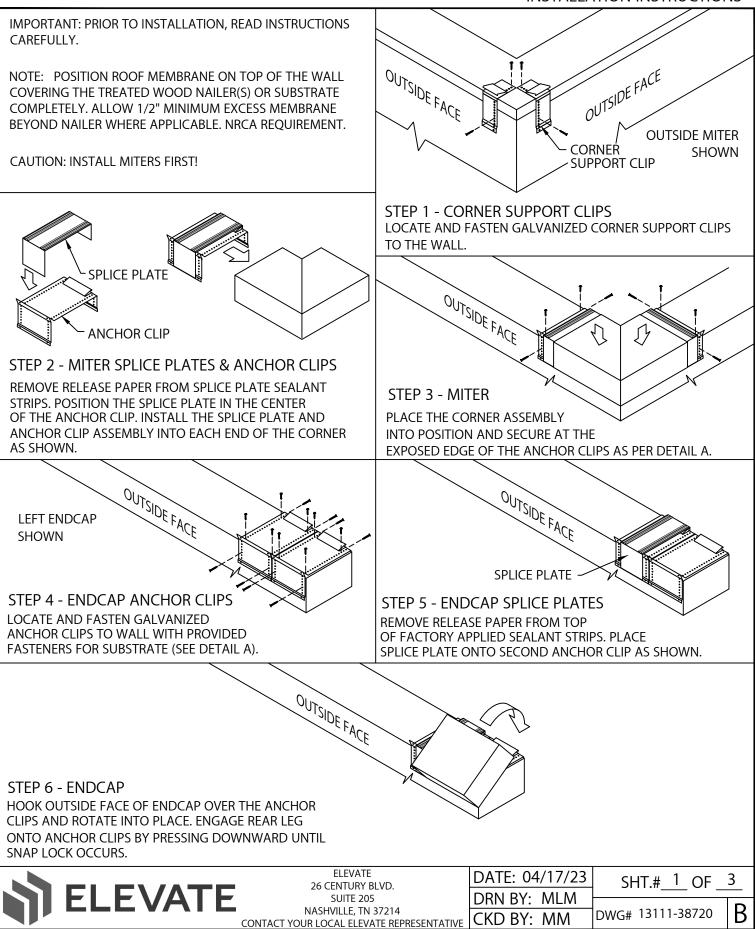

FM


APPROVED



ELEVATE GOLD COPING TAPERED VERSION - 4'-0" O.C.


INSTALLATION INSTRUCTIONS

4'-0" O.C.




1) Installing contractor shall check as-built conditions, including nailer attachment, and verify the manufacturer's coping details for accuracy to fit the wall assembly prior to fabrication.

2) Fasteners must be corrosion resistant and rated for a minimum 250# pullout force for the substrate that is being used.



If using an EIFS system, fasten through face w/ fastener of proper length to penetrate through EIFS and attach into structural component

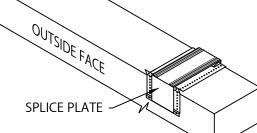

STEP 8 - SPLICE PLATES PLACE SPLICE PLATE ONTO ANCHOR CLIPS AT SPLICE JOINTS, 12'-0" O.C. NOTE: REMOVE RELEASE PAPER FROM SEALANT STRIPS.

STEP 10 - COMPLETION

STEP 7 - ANCHOR CLIPS LOCATE OVER MEMBRANE AND FASTEN GALVANIZED ANCHOR CLIPS TO WALL AT 4'-0" CENTER WITH PROVIDED FASTENERS AS SHOWN IN DETAIL A.

OUTSIDE FACE

UTSIDE FACE

STEP 9 - COPING HOOK OUTSIDE FACE OF COPING OVER THE ANCHOR CLIPS AND ROTATE INTO PLACE. ENGAGE REAR LEG ONTO ANCHOR CLIPS BY PRESSING DOWNWARD UNTIL SNAP LOCK OCCURS.

3/8" SPACE -

CONTINUE INSTALLING COPING WITH A 3/8" SPACE AT SPLICE JOINTS TO ALLOW FOR THERMAL EXPANSION. FIELD CUT WHERE NECESSARY USING FINE TOOTH HACKSAW OR SNIPS. NOTE: REMOVE PROTECTIVE FILM IMMEDIATELY

ELEVATE	ELEVATE 26 CENTURY BLVD. SUITE 205	DATE: 04/17/23	SHT.# 2 OF	3
		DRN BY: MLM		
	NASHVILLE, TN 37214	CKD BY: MM	DWG# 13111-38720	IRI
	CONTACT YOUR LOCAL ELEVATE REPRESENTATIVE			

