


INDUSTRIAL DOWNSPOUT



CLOSED DOWNSPOUT, STYLE 2 DOWNSPOUT STRAP VERSION

INSTALLATION INSTRUCTIONS

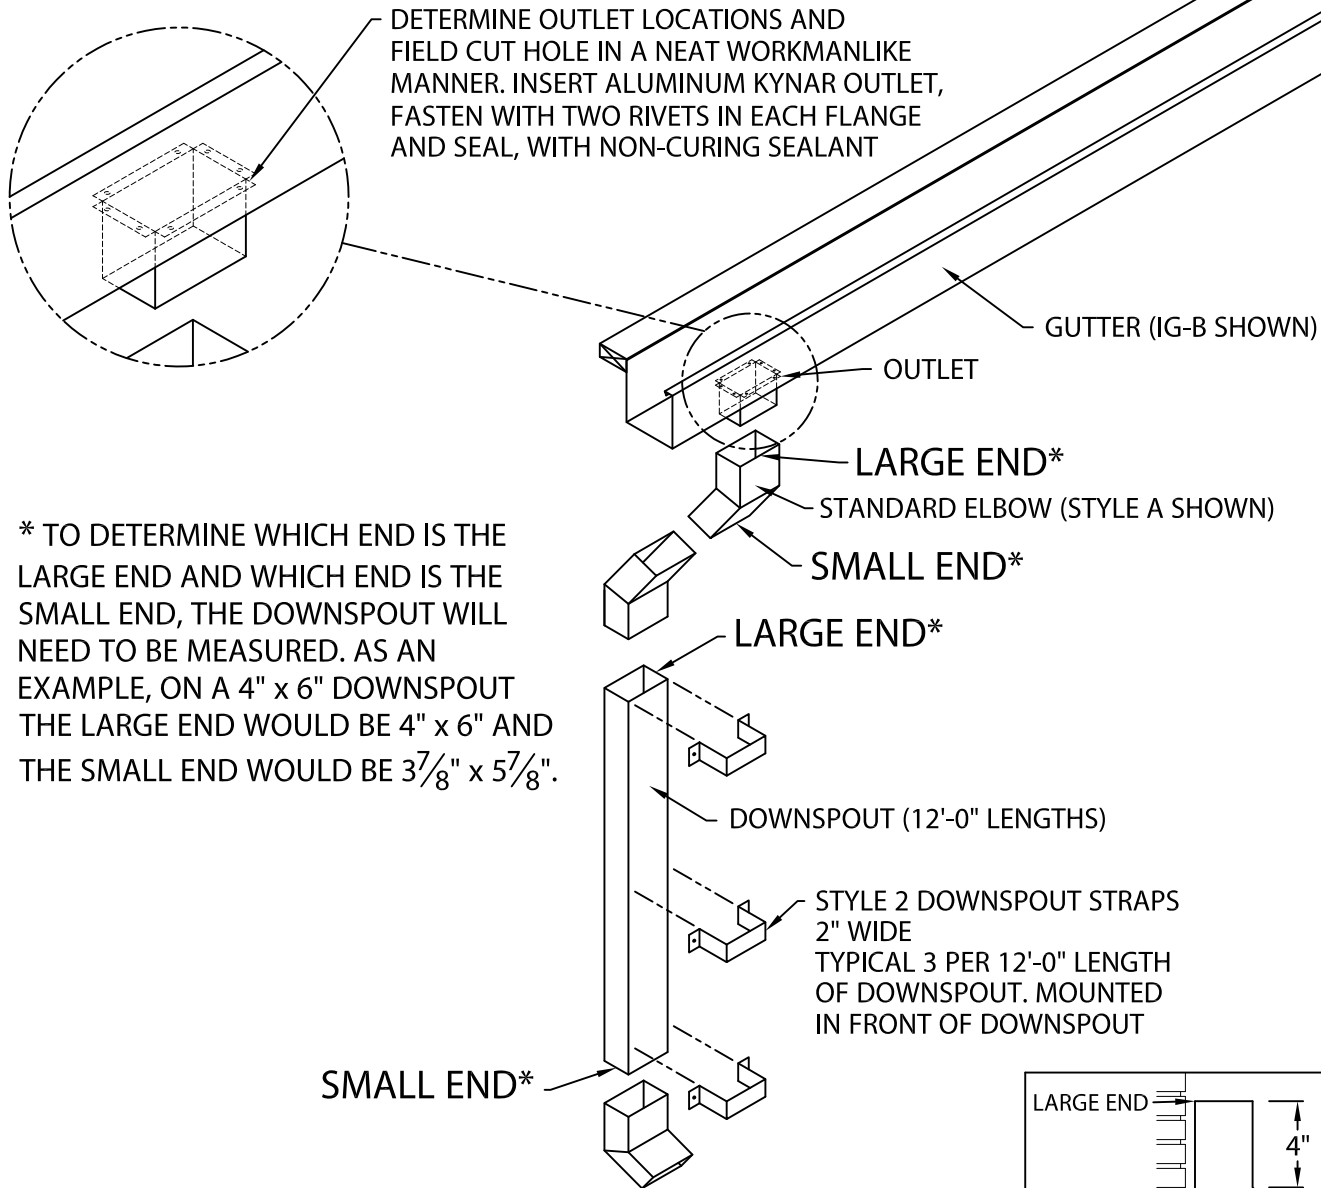


* TO DETERMINE WHICH END IS THE LARGE END AND WHICH END IS THE SMALL END, THE DOWNSPOUT WILL NEED TO BE MEASURED. AS AN EXAMPLE, ON A 4" x 6" DOWNSPOUT THE LARGE END WOULD BE 4" x 6" AND THE SMALL END WOULD BE 3⁷/₈" x 5⁷/₈".

DOWNSPOUT SECTION

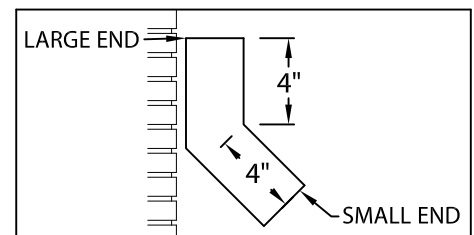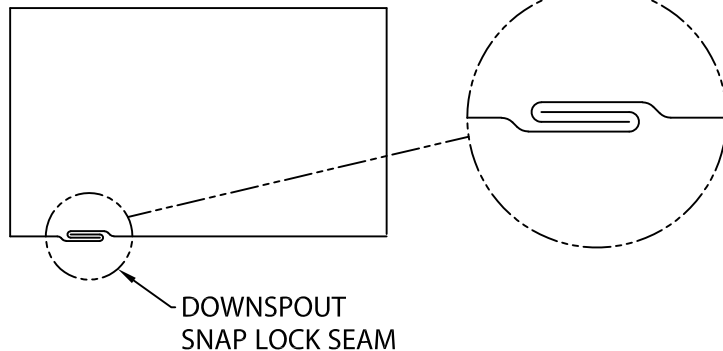

STYLE A DOWNSPOUT

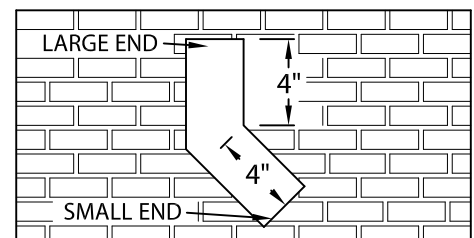

STYLE B DOWNSPOUT



Phone: 800-558-2162
Fax: 800-373-9156
www.metalera.com/genflex

DATE: 03/09/21
DRN BY: JJC
CKD BY: MM

SHT.# ____ OF ____
DWG# 22113-30625

B