
LIGHTNING ROD BRACKET

STYLE


INSTALLATION INSTRUCTIONS

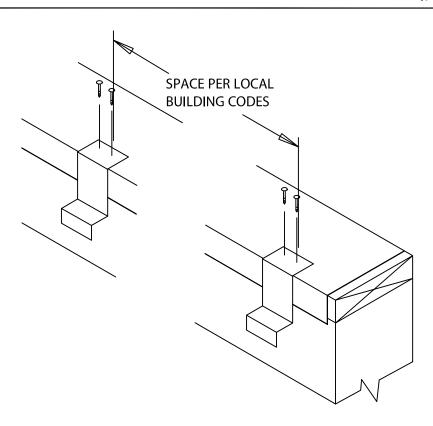

LOCATE AND FASTEN LIGHTNING ROD BRACKETS TO INSIDE FACE OF WALL PER LOCAL BUILDING CODES WITH APPROPRIATE FASTENERS FOR SUBSTRATE.

NOTE: BRACKETS MUST BE INSTALLED PRIOR TO COPING INSTALLATION!

Roof Edge Solutions

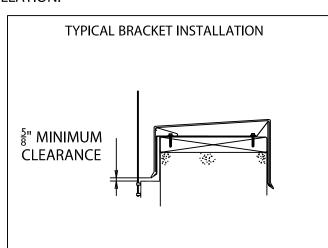

CKD BY: SAK

DWG# 11118-1985

PROJECT:	Corporate Offices, Manufacturing	
ARCHITECT:	1600 Airport Road; Waukesha, WI 5318 Phone: 800-558-2162	3
ROOFING CONTRACTOR:	Fax: 800-373-9156	
REPRESENTATIVE/DISTRIBUTOR:	www.metalera.com	
METAL·ERA®	DATE: 11/15/05 SHT.# OF	
	DRN BY: JJC	