



# GENFLEX DRIP EDGE

WITHOUT CONTINUOUS CLEAT

INSTALLATION INSTRUCTIONS

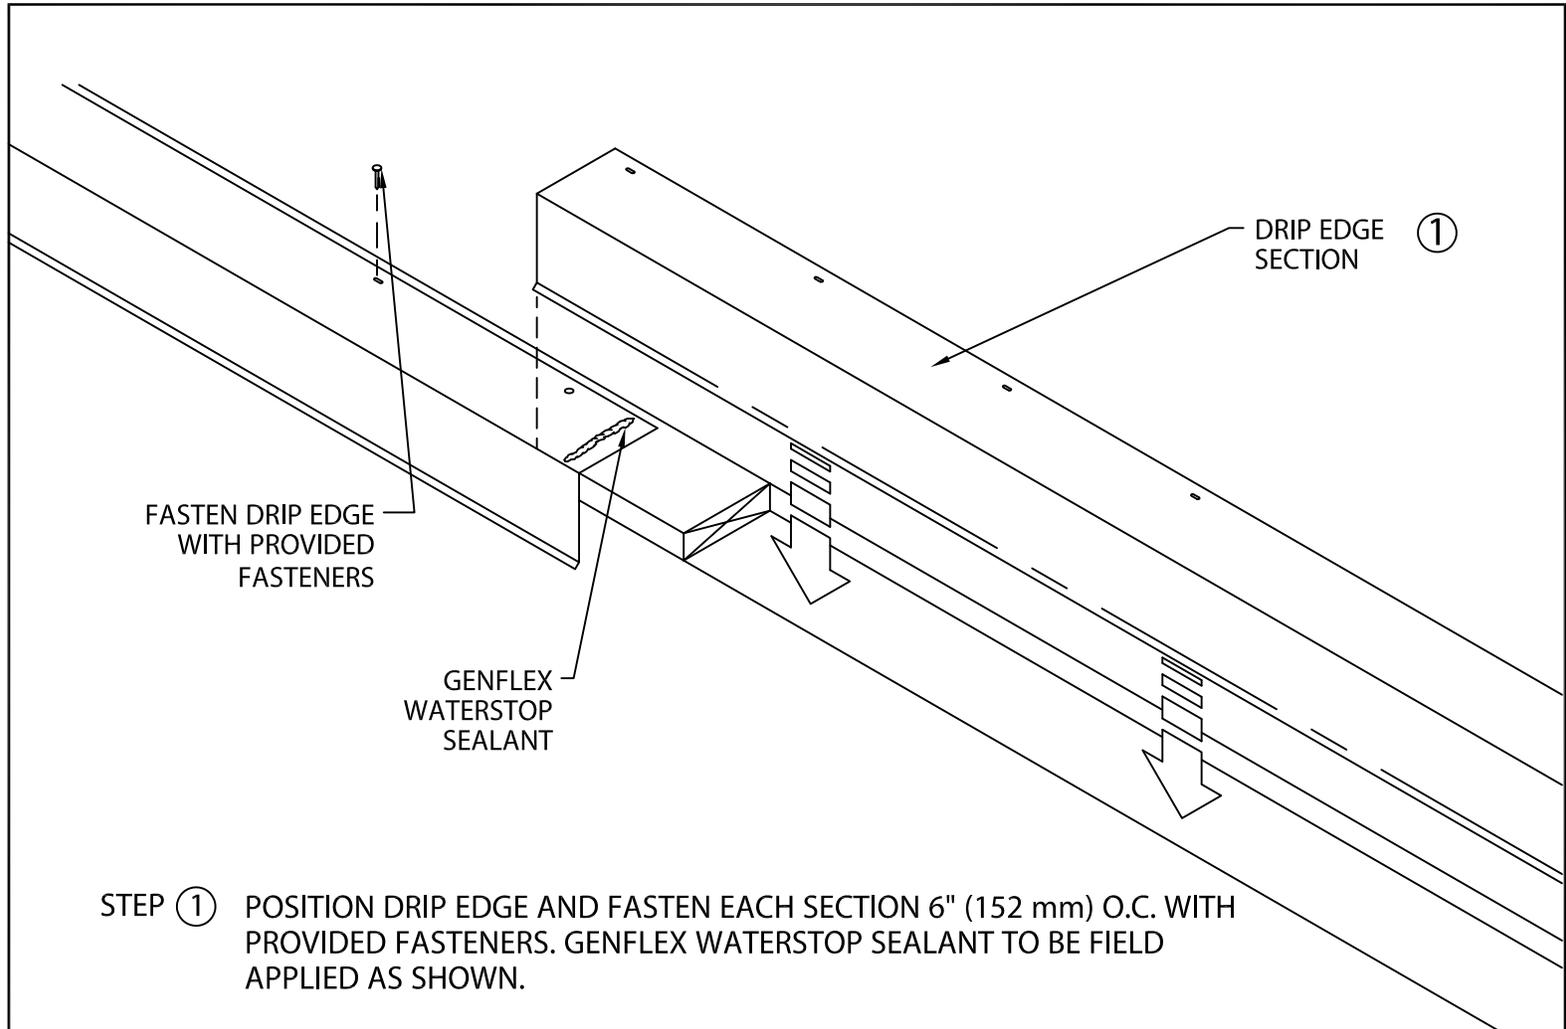


STEP ① POSITION DRIP EDGE AND FASTEN EACH SECTION 6" (152 mm) O.C. WITH PROVIDED FASTENERS. GENFLEX WATERSTOP SEALANT TO BE FIELD APPLIED AS SHOWN.

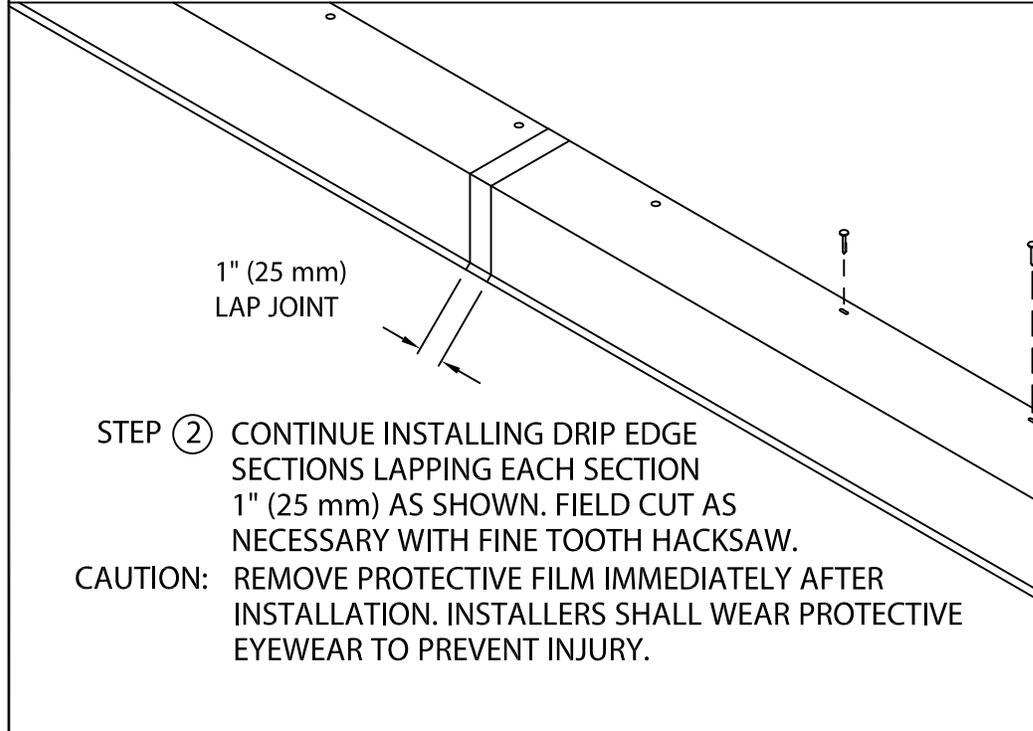

STEP ② CONTINUE INSTALLING DRIP EDGE SECTIONS LAPPING EACH SECTION 1" (25 mm) AS SHOWN. FIELD CUT AS NECESSARY WITH FINE TOOTH HACKSAW.

CAUTION: REMOVE PROTECTIVE FILM IMMEDIATELY AFTER INSTALLATION. INSTALLERS SHALL WEAR PROTECTIVE EYEWEAR TO PREVENT INJURY.

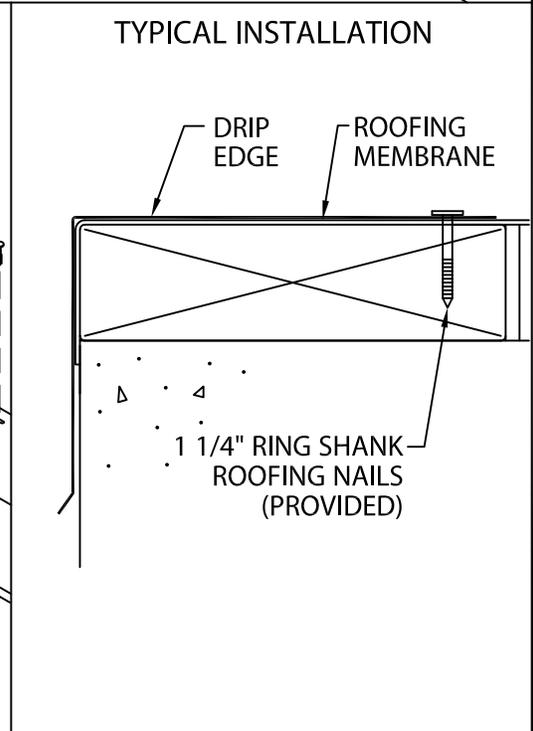

Phone: 800-588-2162  
Fax: 800-373-9156  
www.metalera.com/genflex

DATE: 06/14/21  
DRN BY: JJC  
CKD BY: MM

SHT.# \_\_\_ OF \_\_\_  
DWG# 22110-9895 C