



VERSITRIM COPING MITERS

QUICKLOCK MITER ASSEMBLY

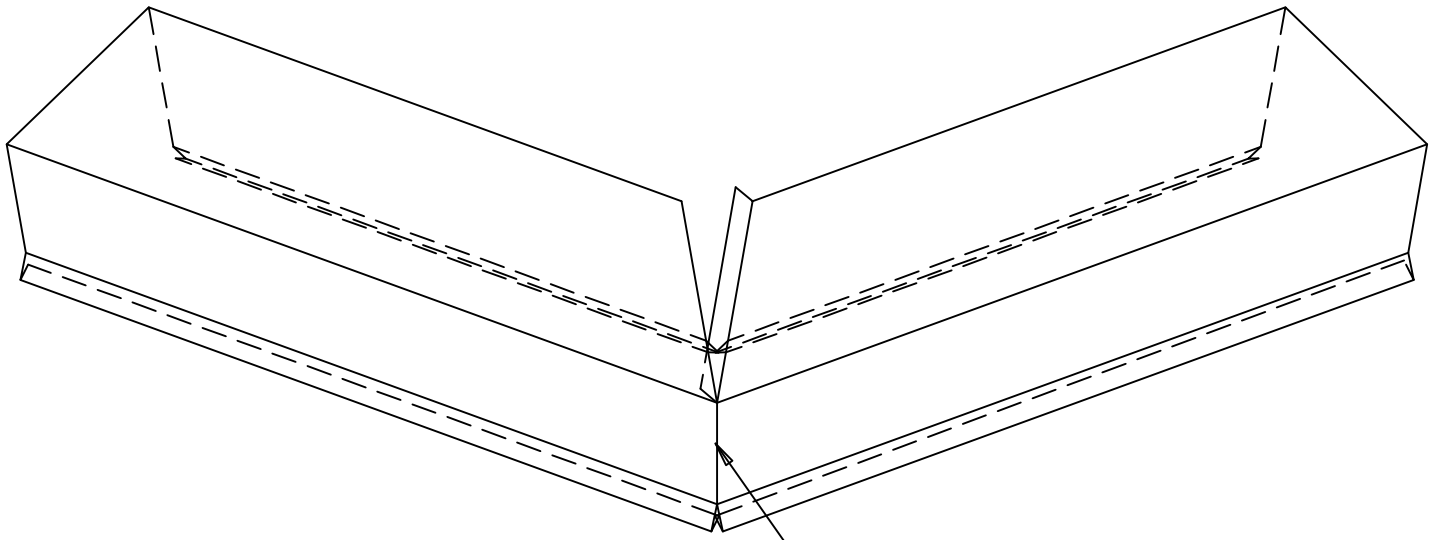

1. MITER IS LAYED OUT
AS 1 PC IN THE FLAT, FORMED,
THEN FOLDED AT FRONT FACE.

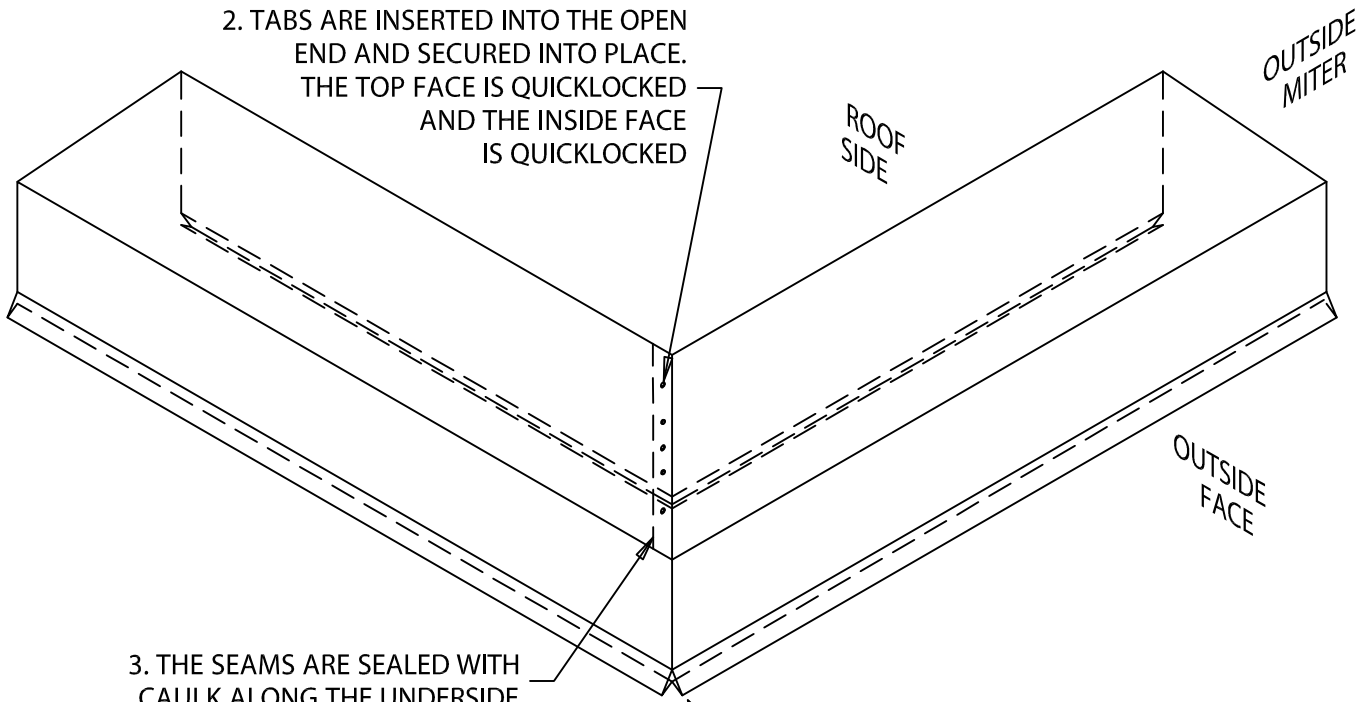

2. TABS ARE INSERTED INTO THE OPEN
END AND SECURED INTO PLACE.
THE TOP FACE IS QUICKLOCKED
AND THE INSIDE FACE
IS QUICKLOCKED

3. THE SEAMS ARE SEALED WITH
CAULK ALONG THE UNDERSIDE

NON-WELDED MITERS ARE FABRICATED
WITH OPEN OUTSIDE CORNERS