


### 1. Roof Membrane

Position membrane over the roof edge and down outside face of wall, covering treated wood nailer(s) completely. Allow 1/2" excess membrane.


**IMPORTANT!** Outside edge of treated wood nailer(s) (minimum 2 x 4) shall be aligned flush with or extend slightly past outermost edge of wall. Fibertite AT Fascia is for use as a perimeter securement on roof designs where the product is not installed in a waterline. If the product will be in a waterline or requires drainage over the edge, we would recommend the use of Fibertite Canted Fascia or Fibertite Drip Edge, depending on desired retention of water or drainage.

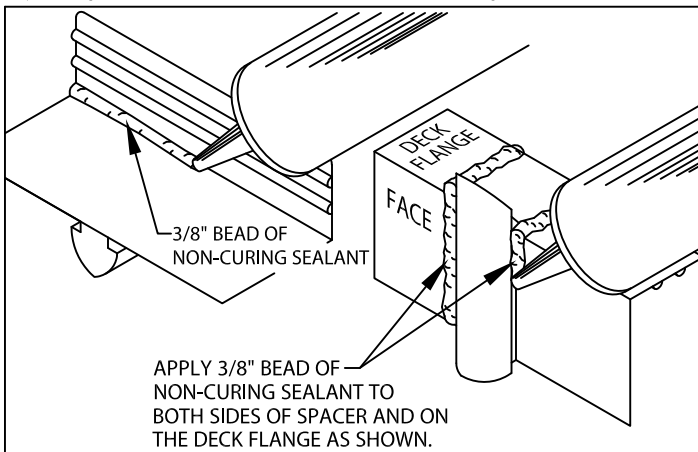

### 3. Anchor Bar Splice Plates


Apply Non-Curing Sealant to each plate as shown and described in STEP 2. Ensure the sealant is placed into the grooves along the spacer.

**CAUTION!** Installers shall wear protective eye wear to prevent injury. Do not over-drive fasteners, as stripping can occur at high driver torque. Recommended driving tool: 600-800 rpm electric drill equipped with depth-sensing nose-piece to prevent driving and stripout. Do not use impact type tool.

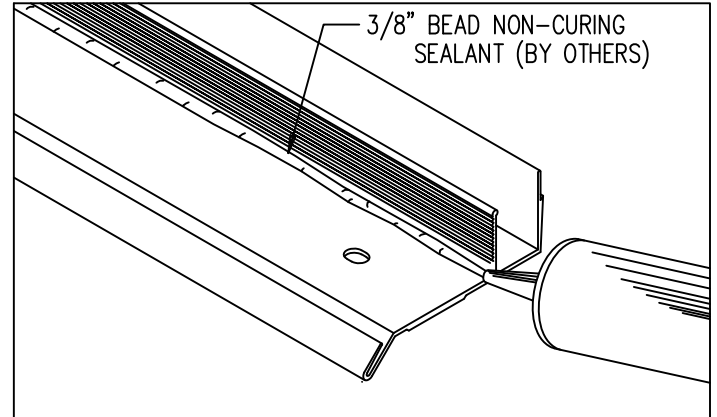


### 2. Miter & Scupper Anchor Bar (Preparation)

Lay miters and scuppers on deck with outside face down. Be sure aluminum anchor bar is clean and free of dirt or dust. Apply a heavy 3/8" bead of non-curing sealant to the right angle intersection of the deck flange and back of anchor-bar as shown. Application of sealant is required along the full length of each miter anchor-bar.

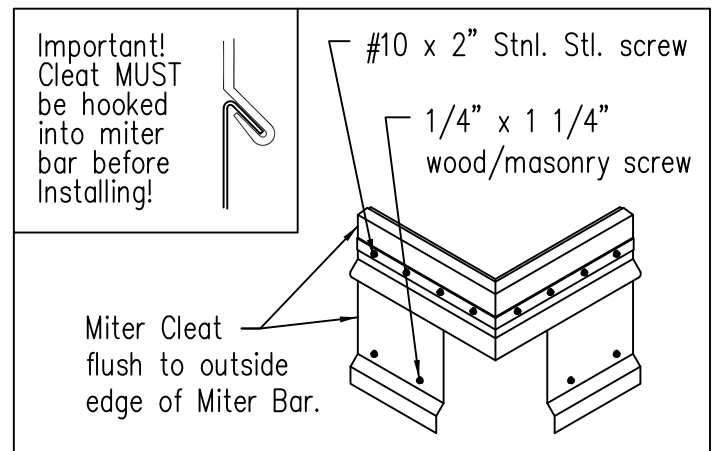


### 4. Miter Bar & Miter Cleat Installation

Hook miter cleat pieces to miter bar. Flush ends of miter cleat piece and miter bar. Fold roofing membrane at corners and install miter assembly with one anchor bar splice plate under each end of miter bar, the anchor bar must insert into the grooves of the splice plate. Fasten the miter bar using 2" hex head stainless steel fasteners. Fasten miter cleat using 1 1/4" hex head corrosion resistant fasteners. Fasteners and drive bits provided by FiberTite. Next locate and install spillouts and scuppers with sealant, fasteners and splice plates.

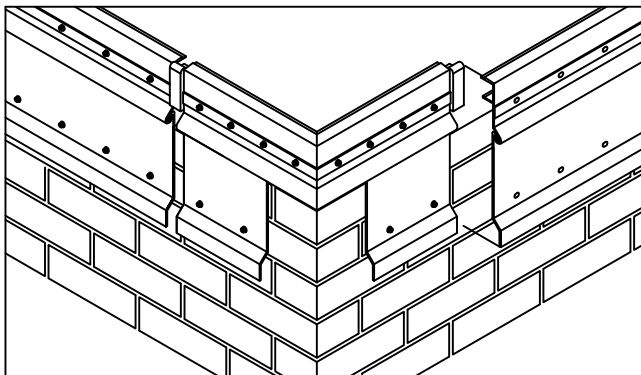


### 5. Anchor Bar & Cleat Installation

Hook anchor cleat to anchor bar as shown in step 4. Position 12' anchor bar/cleat sections with applied non-curing sealant as shown in step 2 overlapping bar splice plate and butting snugly into EPDM gasket. Allow  $\frac{3}{8}$ " space between anchor bars. Install bar splice plate at other end of bar/cleat section. Fasten anchor bar 12 O.C. through slotted holes using provided 2" fasteners. Fasten anchor cleat 24" through slotted holes using provided  $1\frac{1}{4}$ " fasteners. The anchor bars must insert into the grooves of the anchor bar splice plate. Field cut sections as necessary.

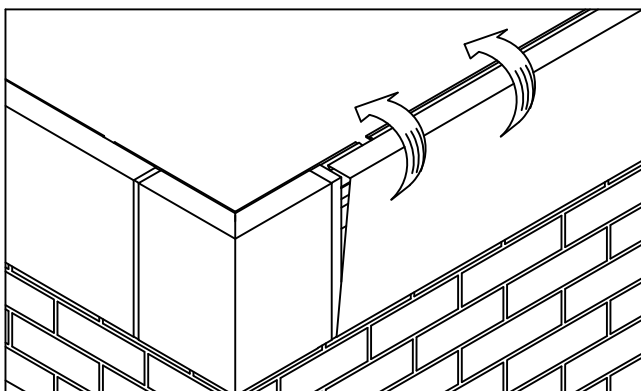

### 7. Fascia Covers


Install 12'-0" fascia cover sections. Allow a  $\frac{3}{8}$ " gap between fascia cover sections. Insert one splice plate under far end of each fascia cover section. Install cover by hooking lower edge of cover onto anchor cleat and rotating cover up and over anchor bar until engaged along entire length of cover section. Continue to install cover sections in this manner, field cutting where necessary using a fine tooth hacksaw.

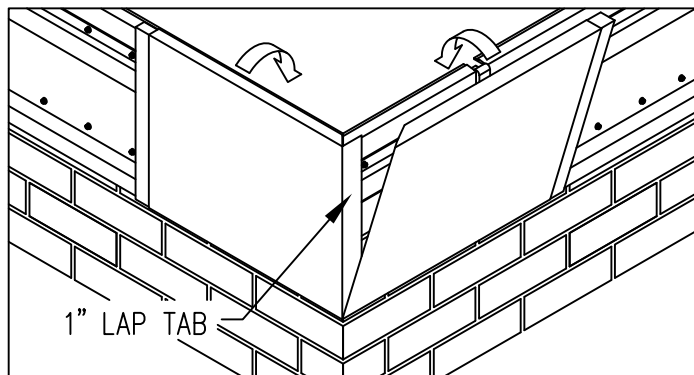

### 6. Fascia Miter Covers

Install miter covers first. Insert one splice plate under each end of the two piece miter cover. Engage cover with 90° tab onto bottom of anchor bar and rotate miter cover up and over anchor bar miter until engaged along entire length of the anchor bar. Repeat steps to install miter cover without the 90° tab.


**IMPORTANT!** Be sure to remove protective plastic film prior to installing each fascia section.

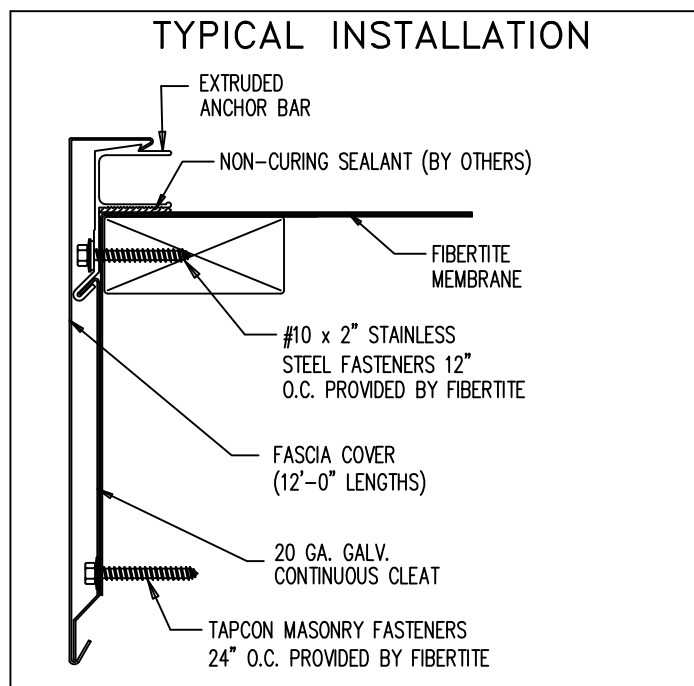


U.S. Patent # 7,451,572

# FIBERTITE AT EXTENDED FASCIA


## COMPONENT LIST




Fascia Cover  
12'-0" Lengths




Cover Splice Plate  
3½" Wide

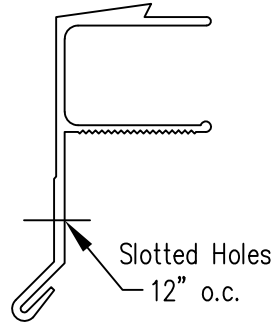


Extruded Anchor Bar  
12'-0" Lengths

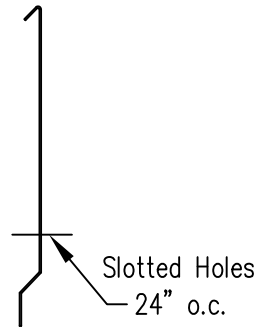

Continuous Anchor Cleat  
12'-0" Lengths

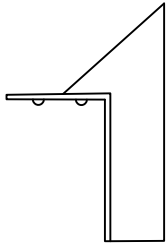


Anchor Bar Splice  
3½" Wide w/ ¾" EPDM Gasket




#10 X 2"  
Stainless Steel Screw w/ washer  
for installing Anchor Bar



1" X 1¼"  
Masonry/Wood Screw w/ washer  
for installing Anchor Cleat

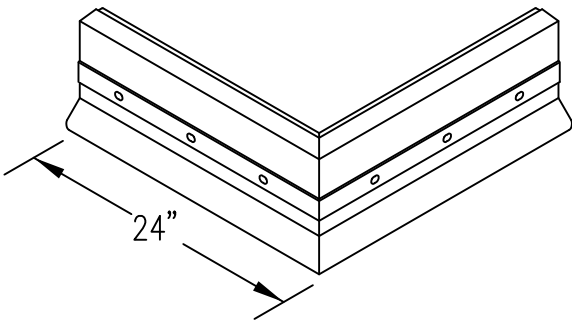


Anchor Bar Miter  
Outside

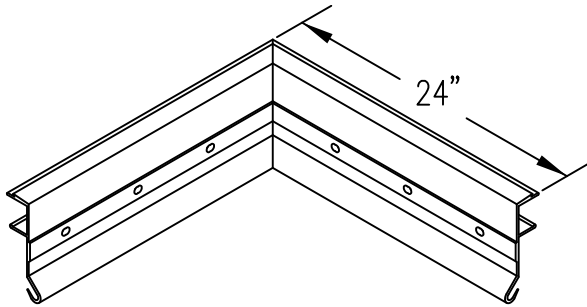


Anchor Bar Miter  
Inside




Anchor Cleat for Miters  
(2) 14" Long pcs. per miter

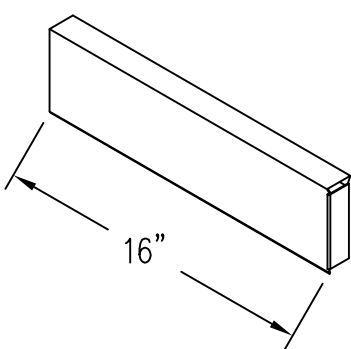


Outside Miter  
Cover With Tab

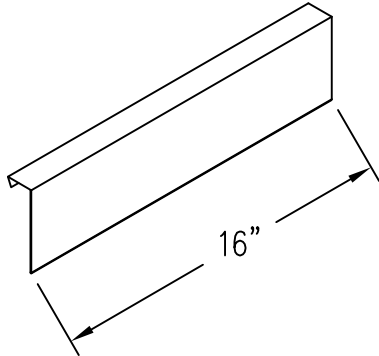

Outside Miter  
Cover Without Tab

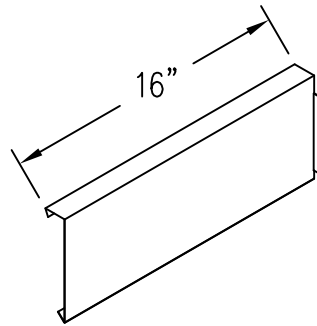

Inside Miter  
Cover With Tab

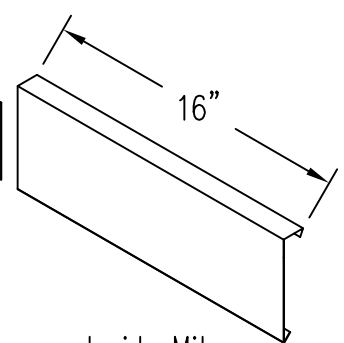

Inside Miter  
Cover Without Tab