



NOTE: INSTALL MITERS FIRST.


IMPORTANT: PRIOR TO INSTALLATION, READ INSTRUCTIONS CAREFULLY.

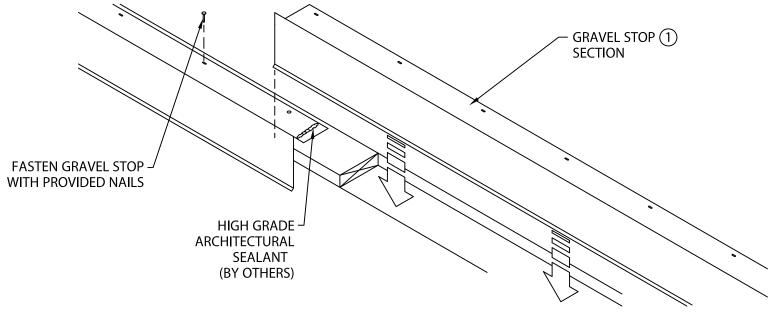

STEP 1 POSITION GRAVEL STOP AND FASTEN EACH SECTION THROUGH HOLES PROVIDED 6" O.C. WITH PROVIDED NAILS. SEALANT (BY OTHERS) TO BE FIELD APPLIED AS SHOWN.

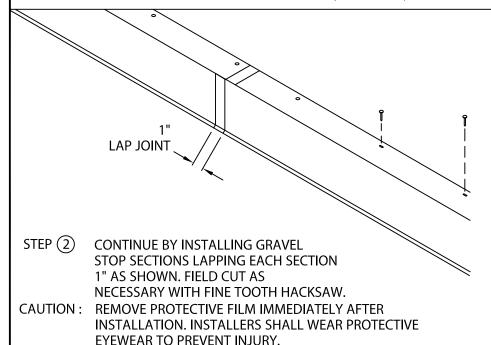

## TYPICAL INSTALLATION

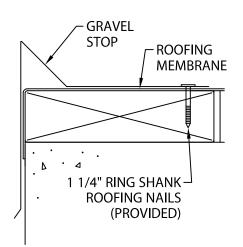

TODAY'S ANSWER TO AN ECONOMICAL ROOF EDGE SYSTEM

Ze S

EDGE SYSTEMS ONE CORPORATE OFFICE:

ECONOMICAL | FAST

TESTED

CUSTOMER SERVICE: 800-558-2162

FAX: 800-373-9156

WEB SITE: METALERA.COM

DATE: 09/26/18

DWN BY: JJC

SHEET: \_\_\_ OF \_\_\_

DWG: 24110-4766

ΙD