
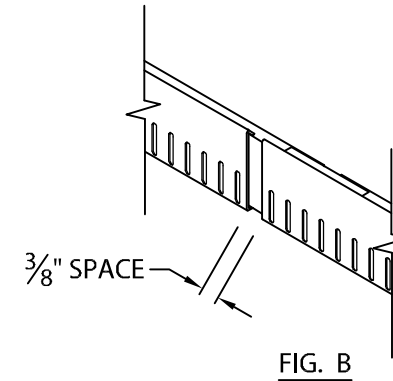



# DERBIGUM GARDEN-TITE DRAIN BAR

## INSTALLATION INSTRUCTIONS

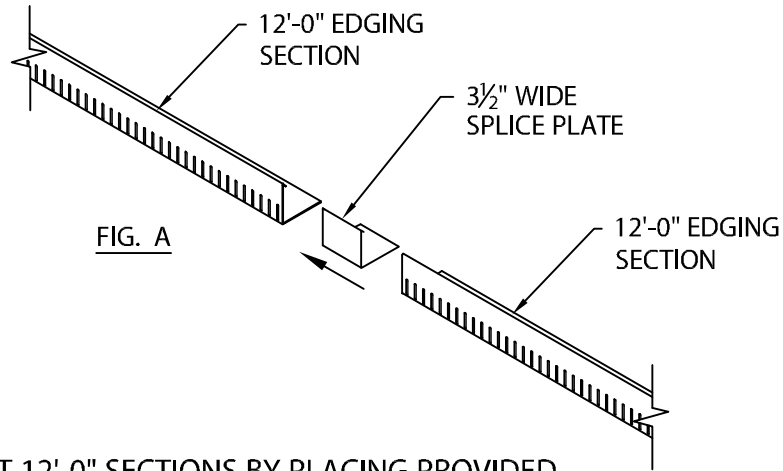

### SPLICE PLATES

CONNECT ADJACENT 12'-0" SECTIONS BY PLACING PROVIDED 3 1/2" SPLICE PLATE AT EACH SECTION (FIG A). BE SURE TO LEAVE A 3/8" SPACE BETWEEN EACH DRAIN BAR (FIG. B).

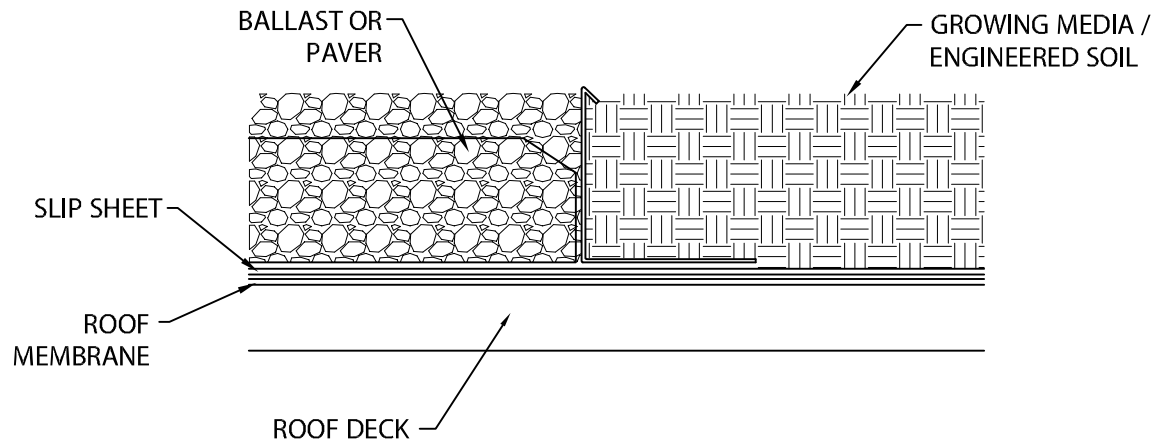

### TYPICAL INSTALLATION

THE EDGING SEPARATES THE GROWING MEDIA FROM BALLAST OR PAVERS.