FM APPROVED


PERMA-TITE SINGLE CANTILEVER COPING

TAPERED VERSION - 3'-0" O.C. INSTALLATION INSTRUCTIONS

IMPORTANT: Prior to installation, read instructions carefully.


NOTE: Position roof membrane on top of the wall covering the treated wood nailer(s) or substrate completely. Allow 1/2" minimum excess membrane beyond nailer where applicable. NRCA requirement. Membrane not shown for clarity.

CAUTION: INSTALL MITERS FIRST!

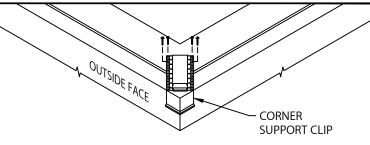


STEP 1 - CORNER SUPPORT CLIPS

LOCATE AND FASTEN ONE GALVANIZED CORNER SUPPORT CLIP TO THE WALL AS SHOWN USING FOUR FASTENERS (PROVIDED).

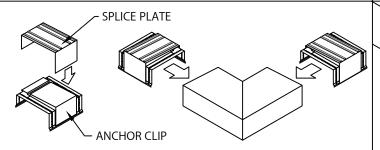


STEP 2 - MITER SPLICE PLATES & ANCHOR CLIPS

POSITION THE SPLICE PLATE IN THE CENTER OF THE ANCHOR CLIP. INSTALL THE SPLICE PLATE AND ANCHOR CLIP ASSEMBLY INTO EACH END OF THE CORNER AS SHOWN

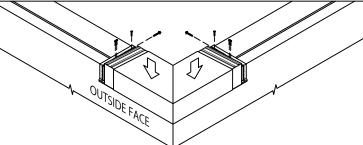


STEP 3 - MITER


PLACE THE CORNER ASSEMBLY INTO POSITION, AND SECURE AT THE EXPOSED EDGE OF THE ANCHOR CLIPS AS PER DETAIL A.

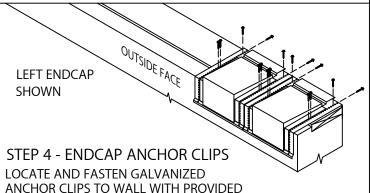


FASTENERS FOR SUBSTRATE (SEE DETAIL A).

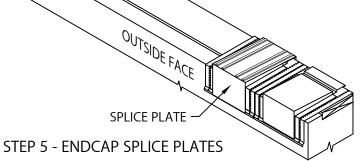

REMOVE RELEASE PAPER FROM TOP OF FACTORY APPLIED DUAL NON-CURING SEALANT STRIPS. PLACE SPLICE PLATE ONTO SECOND ANCHOR CLIP AS SHOWN.

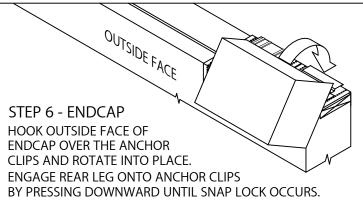

ANCHOR CLIP FASTENING-DETAIL A

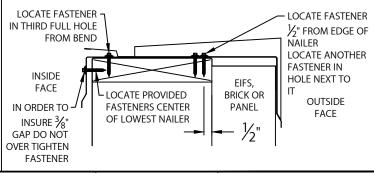



Phone: 800-558-2162 Fax: 800-373-9156 www.metalera.com


DATE: 07/19/22 DRN BY: MLM CKD BY: MM

SHT.# 1 OF 2 DWG# 11111-19394


FM APPROVED

PERMA-TITE SINGLE CANTILEVER COPING


TAPERED VERSION - 3'-0" O.C. INSTALLATION INSTRUCTIONS

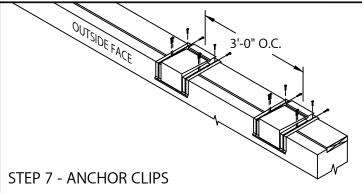


LOCATE AND FASTEN GALVANIZED ANCHOR CLIPS TO WALL AT 3'-0" CENTERS WITH PROVIDED FASTENERS FOR SUBSTRATE (SEE DETAIL A).

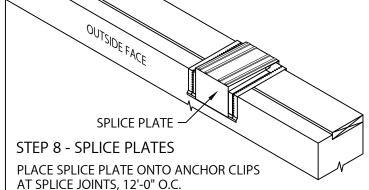

NOTE: REMOVE RELEASE PAPER FROM FACTORY APPLIED DUAL NON-CURING SEALANT STRIPS.

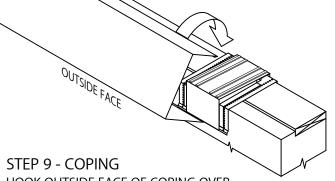


HOOK OUTSIDE FACE OF COPING OVER
THE ANCHOR CLIPS AND ROTATE INTO PLACE. ENGAGE
REAR LEG ONTO ANCHOR CLIPS BY PRESSING DOWNWARD
UNTIL SNAP LOCK OCCURS.

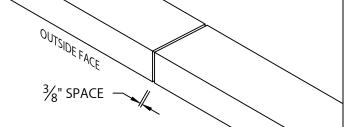

STEP 10 - COMPLETION

CONTINUE INSTALLING COPING WITH A
3/8" SPACE AT SPLICE JOINTS TO ALLOW FOR
THERMAL EXPANSION. FIELD CUT WHERE
NECESSARY USING FINE TOOTH HACKSAW OR SNIPS.
NOTE: REMOVE PROTECTIVE FILM IMMEDIATELY.

TYPICAL COPING INSTALLATION

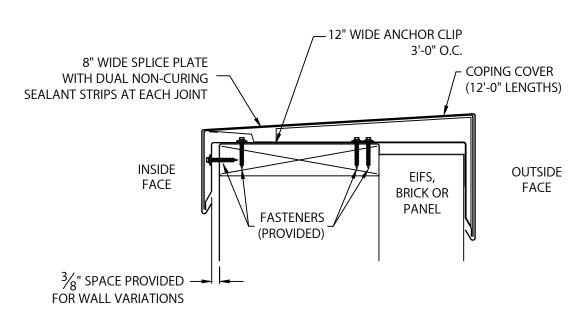

U.S. PATENT # 8,978,317 B1



Phone: 800-558-2162 Fax: 800-373-9156 www.metalera.com DATE: 07/19/22 DRN BY: MLM CKD BY: MM SHT.#_2 OF _2

DWG# 11111-19394