

FIBERTITE GOLD COPING


TAPERED VERSION - 4'-0" O.C.

INSTALLATION INSTRUCTIONS


IMPORTANT: PRIOR TO INSTALLATION, READ INSTRUCTIONS CAREFULLY.

NOTE: POSITION ROOF MEMBRANE ON TOP OF THE WALL COVERING THE TREATED WOOD NAILER(S) OR SUBSTRATE COMPLETELY. ALLOW 1/2" MINIMUM EXCESS MEMBRANE BEYOND NAILER WHERE APPLICABLE. NRCA REQUIREMENT.

CAUTION: INSTALL MITERS FIRST!

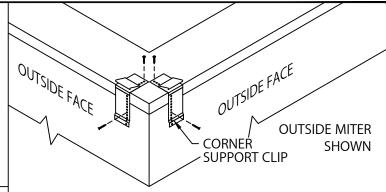


STEP 1 - CORNER SUPPORT CLIPS LOCATE AND FASTEN GALVANIZED CORNER SUPPORT CLIPS TO THE WALL.

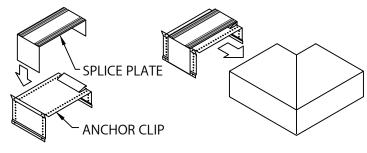


STEP 2 - MITER SPLICE PLATES & ANCHOR CLIPS


REMOVE RELEASE PAPER FROM SPLICE PLATE SEALANT STRIPS. POSITION THE SPLICE PLATE IN THE CENTER OF THE ANCHOR CLIP. INSTALL THE SPLICE PLATE AND ANCHOR CLIP ASSEMBLY INTO EACH END OF THE CORNER AS SHOWN.

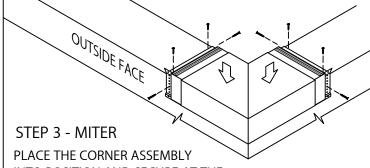


INTO POSITION AND SECURE AT THE EXPOSED EDGE OF THE ANCHOR CLIPS AS PER DETAIL A.

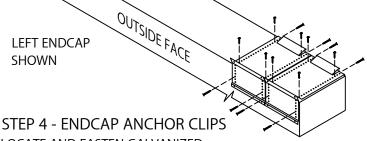

LOCATE AND FASTEN GALVANIZED ANCHOR CLIPS TO WALL WITH PROVIDED FASTENERS FOR SUBSTRATE (SEE DETAIL A).

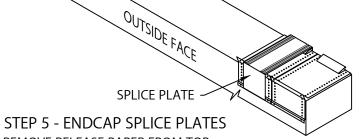

REMOVE RELEASE PAPER FROM TOP
OF FACTORY APPLIED SEALANT STRIPS. PLACE
SPLICE PLATE ONTO SECOND ANCHOR CLIP AS SHOWN.

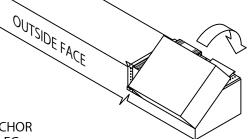

STEP 6 - ENDCAP

HOOK OUTSIDE FACE OF ENDCAP OVER THE ANCHOR CLIPS AND ROTATE INTO PLACE. ENGAGE REAR LEG ONTO ANCHOR CLIPS BY PRESSING DOWNWARD UNTIL SNAP LOCK OCCURS.



Phone: 800-927-8578

ext. 1235

fax: 330-263-6950

DATE: 06/20/22

DRN BY: MLM

CKD BY: MM

SHT.#_ 1_ OF _ 3

DWG# 23111-38759

3111-38759 **A**




FIBERTITE GOLD COPING


TAPERED VERSION - 4'-0" O.C.

INSTALLATION INSTRUCTIONS


INSTALLATION NOTES:

- 1) Installing contractor shall check as-built conditions, including nailer attachment, and verify the manufacturer's coping details for accuracy to fit the wall assembly prior to fabrication.
- 2) Fasteners must be corrosion resistant and rated for a minimum 250# pullout force for the substrate that is being used.

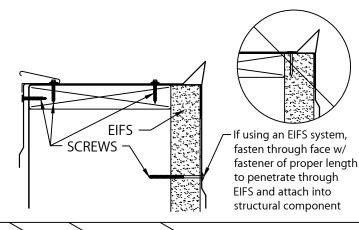

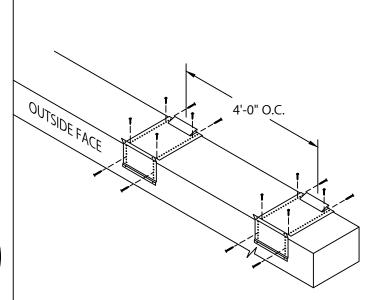


STEP 7 - ANCHOR CLIPS LOCATE OVER MEMBRANE AND FASTEN GALVANIZED ANCHOR CLIPS TO WALL AT 4'-0" CENTER WITH PROVIDED FASTENERS AS SHOWN IN DETAIL A.

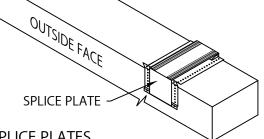

STEP 8 - SPLICE PLATES
PLACE SPLICE PLATE ONTO ANCHOR CLIPS
AT SPLICE JOINTS, 12'-0" O.C.

NOTE: REMOVE RELEASE PAPER FROM SEALANT STRIPS.

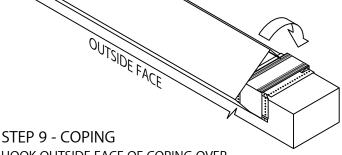


HOOK OUTSIDE FACE OF COPING OVER
THE ANCHOR CLIPS AND ROTATE INTO PLACE. ENGAGE
REAR LEG ONTO ANCHOR CLIPS BY PRESSING DOWNWARD
UNTIL SNAP LOCK OCCURS.

STEP 10 - COMPLETION
CONTINUE INSTALLING COPING WITH A

3/8" SPACE AT SPLICE JOINTS TO ALLOW FOR THERMAL EXPANSION. FIELD CUT WHERE NECESSARY USING FINE TOOTH HACKSAW OR SNIPS.

NOTE: REMOVE PROTECTIVE FILM IMMEDIATELY.

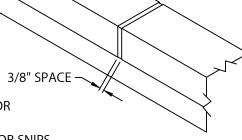



Phone: 800-927-8578

ext. 1235

fax: 330-263-6950

DATE: 06/20/22

DRN BY: MLM

CKD BY: MM

SHT.#_2_OF_3

DWG# 23111-38759

|A|




FIBERTITE GOLD COPING

TAPERED VERSION - 4'-0" O.C.

INSTALLATION INSTRUCTIONS

TYPICAL COPING INSTALLATION DETAIL A

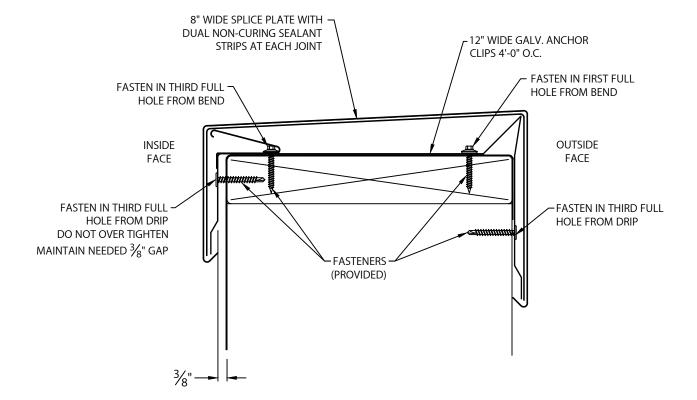



Phone: 800-927-8578

ext. 1235

fax: 330-263-6950

DATE: 06/20/22

DRN BY: MLM

CKD BY: MM

SHT.#_3_OF_3

DWG# 23111-38759

|A|