

_____ Outside Miter (90°)

Right Endcaps


Left Endcaps

Inside Miter (90°)

PRESTO-LOCK COPING

EXISTING SLOPE

ACTUAL WALL SIZE

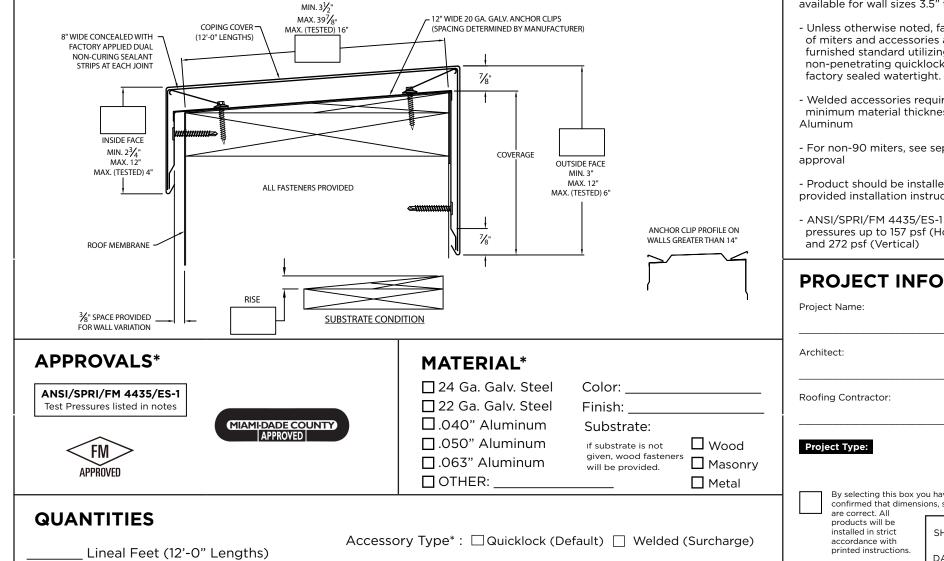

_____ Right Endwall Flashing (Coping Version)

Right Endwall Flashing (Splice Plate Version)

Left Endwall Flashing (Splice Plate Version)

Left Endwall Flashing (Coping Version)

* NOTES

- Oil canning can occur on larger face heights and wall widths; recommend 22 Ga.,.050" or .063" Aluminum for face height over 8" or wall width over 12".
- 24 Ga. and .040" Aluminum covers available for wall sizes 3.5" to 24" ONLY
- Unless otherwise noted, fabrication of miters and accessories are furnished standard utilizing a non-penetrating quicklock joint, then factory sealed watertight.
- Welded accessories require a minimum material thickness of .050" Aluminum
- For non-90 miters, see separate print approval
- Product should be installed per provided installation instructions
- ANSI/SPRI/FM 4435/ES-1 test pressures up to 157 psf (Horizontal) and 272 psf (Vertical)

Project Name:		
Architect:		

Pro	iect	TV6	e:

303-978-2000

Technical: 800-922-5922 Option 3

Account Specialists: 877-766-3295 General Product Information Center: 800-654-3103

By selecting this box yo confirmed that dimensionare correct. All	ou have verified and ions, sizes, and quantities	
products will be installed in strict accordance with	SHT# 1 of 2	
printed instructions.	DATE: 12/9/22	
Date:	DRN BY: JJC	
Johns Manville EdgeMetal@jm.com Main JM Switchboard USA:	CKD BY: MM	


SHT# 1 of 2 DATE: 12/9/22 JJC DRN BY:

CKD BY: __ DWG #: 16011-1838




PRESTO-LOCK COPING

STANDARD ACCESSORIES

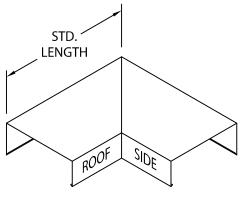


OUTSIDE MITER

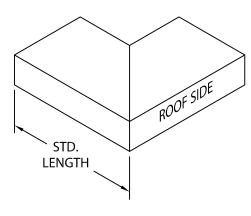


INSIDE MITER


MITER STANDARD LEG LENGTH:
WALL SIZE +10 1/8" = LENGTH

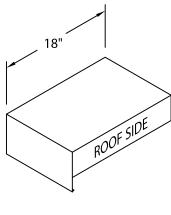

ENDCAP (LEFT HAND SHOWN)

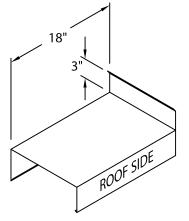

ENDWALL FLASHING COPING VERSION (RIGHT HAND SHOWN)

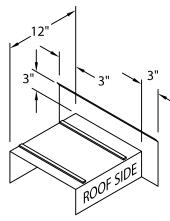

ENDWALL FLASHING
SPLICE PLATE VERSION
(RIGHT HAND SHOWN)
(AVAILABLE ONLY IN
.040" WELDED, PAINTED
TO MATCH COPING)

NOTES

Additional accessories are available including:

- Transition Miters
- Straight Transition Miters
- "T" Miters
- "Z" Miters
- Step-up Miters
- Peak / Valley Miters
- Pilaster Caps
- Radius Coping
- Arched Coping

For additional accessory requirements, attach sketches or call manufacturer for assistance.

Johns Manville

EdgeMetal@jm.com Main JM Switchboard USA: 303-978-2000 Technical: 800-922-5922 Option 3 Account Specialists: 877-766-3295 General Product Information Center: 800-654-3103 SHT# _2 of _2

DATE: ___12/9/22

DRN BY: ____JJC

CKD BY: ____MM

DWG #: ____16011-1838

REV: ____H